BayRS Version 15.1

Part No. 308630-15.1 Rev 00
October 2001

600 Technology Park Drive
Billerica, MA 01821-4130

Configuring IPsec Services

NORTEL NETWORKS™

Copyright © 2001 Nortel Networks

All rights reserved. October 2001.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

The software described in this document is furnished under a license agreement and may only be used in accordance with the terms of that license. The software license agreement is included in this document.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, AN, BN, Contivity, and Passport are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

RSA is a trademark of RSA Security Inc.

The asterisk after a name denotes a trademarked item.

Restricted Rights Legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product may be Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Nortel Networks Inc. Software License Agreement

This Software License Agreement ("License Agreement") is between you, the end-user ("Customer") and Nortel Networks Corporation and its subsidiaries and affiliates ("Nortel Networks"). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

"Software" is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment ("CFE"), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer's Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided "AS IS" without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER'S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

a. If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).

b. Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.

c. Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.

d. Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.

e. The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.

f. This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Contents

Preface

Before You Begin xiii
Text Conventions xiv
Acronyms xv
Hard-Copy Technical Manuals xvi
How to Get Help xvii

Chapter 1
Overview of IPsec

About IPsec 1-2
Configuring IPsec and NAT on One Interface 1-2
Network Requirements for Nortel Networks Routers 1-3
Supported Routers 1-3
Supported WAN Protocols 1-3
IPsec Services 1-4
Confidentiality 1-4
Integrity 1-4
Authentication 1-4
Additional IPsec Services 1-5
How IPsec Works 1-5
IPsec Protection 1-5
IPsec Tunnel Mode 1-6
IPsec Elements 1-7
Security Gateways 1-8
Security Policies 1-8
Policy Templates 1-9
Inbound Policies 1-9
Outbound Policies 1-10
Policy Criteria Specification 1-10

Security Associations 1-11
Automated Security Associations Using IKE 1-11
Manual Security Associations 1-12
Security Associations for Bidirectional Traffic 1-12
How IKE Negotiates Security Associations 1-13
Security Parameter Index 1-13
Examples of Security Policies and Security Associations 1-14
Security Protocols 1-15
Encapsulating Security Payload (ESP) Protocol 1-15
Authentication Header (AH) Protocol 1-16
Internet Key Exchange Protocol 1-17
Perfect Forward Secrecy 1-17
Performance Considerations 1-17

Chapter 2
Installing IPsec

Upgrading Router Software 2-1
Installing the IPsec Software 2-2
Completing the Installation Process 2-3
Securing Your Site 2-4
Securing Your Configuration 2-4
Encryption Keys 2-4
Random Number Generator 2-5
Creating and Using NPKs 2-5
Generating NPKs 2-5
Entering an Initial NPK and a Seed for Encryption 2-6
Changing an NPK 2-7
Monitoring NPKs 2-8

Chapter 3
Starting IPsec

Enabling IPsec and IKE 3-1
Creating Policies 3-2
Specifying Criteria 3-2
Specifying an Action 3-3
Policy Considerations 3-3

Creating an Outbound Policy Template and Policy 3-4
Creating an Inbound Policy Template and Policy 3-6
Creating Security Associations 3-7
Automated SA Creation 3-7
Creating an Outbound Protect Policy with Automated SAs (IKE) 3-8
About Manual SA Creation 3-9
Creating a Protect SA Manually 3-10
Creating an Unprotect SA Manually 3-11

Chapter 4
Customizing IPsec

Changing Existing Policies 4-1
Editing a Policy 4-2
Adding a Policy 4-3
Ethernet Interface or WAN Interface with PPP 4-3
WAN Interface with Frame Relay 4-4
Reordering Policies 4-6
Ethernet Interface or WAN Interface with PPP 4-6
WAN Interface with Frame Relay 4-7
Changing Existing Security Associations 4-8
Modifying Automated SAs (IKE) 4-8
Modifying Manual SAs 4-9
Ethernet Interface or WAN Interface with PPP 4-9
WAN Interface with Frame Relay 4-10
Disabling IPsec 4-11

Appendix A
Site Manager Parameters

Node Protection Key Parameter A-2
IPsec Parameters A-3
IPsec Policy Parameters A-4
Manual Security Association Parameters A-5
Automated Security Association (IKE) Parameters A-10

Appendix B
Definitions of k Commands

Appendix C
Configuration Examples

Inbound and Outbound Policies C-1
Automated SA (IKE) Policy Examples C-2
Manual SA Policy Examples C-5
Manual Protect and Unprotect SA Configuration C-10

Appendix D
Contivity VPN Switch Interoperability

Supported Software Versions D-1
Web Browser Configuration of the Contivity VPN Switch D-2
IPsec Terminology D-2
Configuration Considerations D-3
Network Addresses D-3
Routing D-3
Performance D-4
Feature Comparison Summary D-4
Features Supported by Both Platforms D-4
BayRS Features Not Supported by the Contivity VPN Switch D-5
Contivity VPN Switch Features Not Supported by BayRS D-5
Troubleshooting BayRS-Contivity IPsec Interoperability D-6
BayRS Tools D-6
Contivity Tools D-6
Symptoms You May See D-7

Appendix E
Protocol Numbers

Assigned Internet Protocol Numbers by Name E-2
Assigned Internet Protocol Numbers by Number E-7

Index

Figures

Figure 1-1. IPsec Environment: Unique SAs Between Routers 1-6
Figure 1-2. IPsec Security Gateways, Security Policies, and Security Associations .. 1-7
Figure 1-3. IPsec Security Gateways and Security Policies 1-8
Figure 1-4. Security Associations for Bidirectional Traffic 1-13
Figure C-1. IPsec Automated Outbound Policies C-2
Figure C-2. IPsec Manual Outbound Policies C-6
Figure C-3. Single Protect/Unprotect SA Pair C-10
Figure C-4. Multiple Protect/Unprotect SA Pairs C-13

Tables

Table 1-1. Security Policy Specifications 1-14
Table 1-2. Manual SA Configurations 1-15
Table 2-1. IPsec Installation Files by Router Platform 2-2
Table D-1. Comparison of BayRS and Contivity IPsec Terminology D-2
Table E-1. Internet Protocol Numbers Sorted by Acronym E-2
Table E-2. Internet Protocol Numbers Sorted by Number E-7

Preface

This guide describes the Nortel Networks* implementation of IP Security (IPsec) and how to configure it on a Nortel Networks router.

Before You Begin

Before using this guide, you must complete the following procedures. For a new router:

- Install the router (see the installation guide that came with your router).
- Connect the router to the network and create a pilot configuration file (see *Quick-Starting Routers*, *Configuring Remote Access for AN and Passport ARN Routers*, or *Connecting ASN Routers to a Network)*.

Make sure that you are running the latest version of Nortel Networks BayRS and Site Manager software. For information about upgrading BayRS and Site Manager, see the upgrading guide for your version of BayRS.

Text Conventions

This guide uses the following text conventions:

angle brackets (< >)	Indicate that you choose the text to enter based on the description inside the brackets. Do not type the brackets when entering the command. Example: If the command syntax is: **ping** <*ip_address*>, you enter: **ping 192.32.10.12**
bold text	Indicates command names and options and text that you need to enter. Example: Enter **show ip** {**alerts** | **routes**}. Example: Use the **dinfo** command.
braces ({ })	Indicate required elements in syntax descriptions where there is more than one option. You must choose only one of the options. Do not type the braces when entering the command. Example: If the command syntax is: **show ip** {**alerts** | **routes**}, you must enter either: **show ip alerts** or **show ip routes**, but not both.
brackets ([ ])	Indicate optional elements in syntax descriptions. Do not type the brackets when entering the command. Example: If the command syntax is: **show ip interfaces** [**-alerts**], you can enter either: **show ip interfaces** or **show ip interfaces -alerts**.
italic text	Indicates new terms, book titles, and variables in command syntax descriptions. Where a variable is two or more words, the words are connected by an underscore. Example: If the command syntax is: **show at** <*valid_route*> *valid_route* is one variable and you substitute one value for it.

`screen text`	Indicates system output, for example, prompts and system messages. Example: `Set Trap Monitor Filters`
separator (>)	Shows menu paths. Example: Protocols > IP identifies the IP option on the Protocols menu.
vertical line (|)	Separates choices for command keywords and arguments. Enter only one of the choices. Do not type the vertical line when entering the command. Example: If the command syntax is: **show ip** {**alerts** | **routes**}, you enter either: **show ip alerts** or **show ip routes**, but not both.

Acronyms

This guide uses the following acronyms:

3DES	Triple DES
AH	Authentication Header
CBC	cipher block chaining
CPU	central processing unit
DES	Data Encryption Standard
ESP	Encapsulating Security Payload
HMAC	Hashing Message Authentication Code
IANA	Internet Assigned Numbers Authority
ICMP	Internet Control Message Protocol
ICV	integrity check value
IETF	Internet Engineering Task Force
IKE	Internet Key Exchange
IP	Internet Protocol
IPsec	Internet Protocol Security

ISAKMP/Oakley	Internet Security Association and Key Management Protocol with Oakley Key Determination
IV	initialization vector
MD5	Message Digest 5
MIB	management information base
NAT	Network Address Translation
NBMA	nonbroadcast multi-access
NPK	node protection key
OSPF	Open Shortest Path First
PFS	perfect forward secrecy
RFC	Request for Comments
SA	security association
SAD	security associations database
SPD	security policy database
SPI	security parameter index
TCP	Transmission Control Protocol
VPN	virtual private network
WAN	wide area network

Hard-Copy Technical Manuals

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortelnetworks.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.

You can purchase selected documentation sets, CDs, and technical publications through the Internet at the www1.fatbrain.com/documentation/nortel/ URL.

How to Get Help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact one of the following Nortel Networks Technical Solutions Centers:

Technical Solutions Center	Telephone
Europe, Middle East, and Africa	(33) (4) 92-966-968
North America	(800) 4NORTEL or (800) 466-7835
Asia Pacific	(61) (2) 9927-8800
China	(800) 810-5000

Additional information about the Nortel Networks Technical Solutions Centers is available from the www.nortelnetworks.com/help/contact/global URL.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the http://www130.nortelnetworks.com/cgi-bin/eserv/common/essContactUs.jsp URL.

Chapter 1
Overview of IPsec

This chapter describes the emerging Internet Engineering Task Force (IETF) standards for security services over public networks, commonly referred to as IP Security or IPsec. The chapter also includes information specific to the Nortel Networks implementation of IPsec and requirements for that implementation.

This chapter includes the following information:

Topic	Page
About IPsec	1-2
Configuring IPsec and NAT on One Interface	1-2
Network Requirements for Nortel Networks Routers	1-3
IPsec Services	1-4
How IPsec Works	1-5
IPsec Elements	1-7
Security Protocols	1-15
Internet Key Exchange Protocol	1-17
Performance Considerations	1-17

About IPsec

IP Security is the IETF set of emerging standards for security services for communications over public networks. The standards are documented in the IETF Requests for Comments (RFCs) 2401 through 2412. Additional RFCs may be relevant as well.

These standards were developed to ensure secure, private communications for the remote access, extranet, and intranet virtual private networks (VPNs) used in enterprise communications. They are the security architecture for the next generation of IP, called IPv6, but are available for the current IPv4 Internet as well.

The Nortel Networks implementation of the IETF standards provides network (layer 3) security services for Ethernet and wide area network (WAN) communications on Nortel Networks routers.

Configuring IPsec and NAT on One Interface

You can configure both IPsec and unidirectional Network Address Translation (NAT) on the same router interface. However, the address ranges that you configure for NAT and in IPsec policy filters cannot overlap.

You configure IPsec using Site Manager. You can configure NAT using either the BCC or Site Manager. When you configure IPsec and NAT on the same router interface, IPsec and NAT operate independently and do not pass traffic to each other.

When you configure both IPsec and NAT on the same router interface, NAT takes precedence over IPsec. For example, if the destination address of an incoming IP packet does not match any configured NAT public address, then the packet is processed by IPsec. If the IP packet contains an address that falls within the configured range of an IPsec policy, then the packet is either protected, bypassed, or dropped. A packet with a source address not within any IPsec policy range will be dropped.

Note: Router interfaces configured for bidirectional NAT do not support IPsec.

Network Requirements for Nortel Networks Routers

To install the IPsec software, the router must be running, at a minimum, BayRS Version 13.10 and Site Manager Version 7.10. To use Internet Key Exchange (IKE) and automated security associations (SAs), BayRS Version 13.20 and Site Manager Version 7.20 or later are required.

Supported Routers

Nortel Networks IPsec technologies are implemented on BayRS router interfaces supporting Ethernet and WAN communications.

IPsec can provide encryption and authentication services to any Ethernet or WAN interface on the following routers:

- Access Node (AN*)
- Access Stack Node (ASN)
- Advanced Remote Node (ARN)
- Backbone Node (BN*)
- Passport* 2430
- Passport 5430
- System 5000 router modules

Nortel Networks Contivity* VPN Switch hardware also supports IPsec. The Contivity VPN Switch does not use BayRS software, but it can be configured to interoperate with BayRS. Refer to Appendix D, "Contivity VPN Switch Interoperability" and the Contivity documentation for more information.

Supported WAN Protocols

The Nortel Networks implementation of IPsec supports Point-to-Point Protocol (PPP) and frame relay WAN protocols. The Nortel Networks IPsec implementation also supports dial services, which provide backup and demand services for PPP and frame relay.

IPsec Services

IPsec services consist of confidentiality, integrity, and authentication services for data packets traveling between security gateways.

- Confidentiality service ensures the privacy of communications.
- Integrity service detects modification of data packets.
- Authentication services verify the origin of every data packet.

Confidentiality

Confidentiality is accomplished by encrypting and decrypting data packets. The Encapsulating Security Payload (ESP) protocol uses the Data Encryption Standard (DES) algorithm in cipher block chaining (CBC) mode to encrypt and decrypt data packets.

You set confidentiality with the cipher algorithm and cipher key parameters. The cipher algorithm and cipher key are specified in *security associations* (SAs). A security association is a relationship in which two peers share the necessary information to securely protect and unprotect data. The algorithm and key must be identical on both ends of an IPsec SA.

Integrity

Integrity determines whether the data has been altered during transit. The ESP protocol ensures that data has not been modified as it passes between the security gateways. The ESP protocol uses the HMAC MD5 (RFC 2403) or HMAC SHA-1 (RFC 2404) transform.

You set integrity with the integrity algorithm and integrity key parameters. The integrity algorithm and integrity key must be identical on both ends of an IPsec SA.

Authentication

Authentication ensures that data has been transmitted by the identified source.

Additional IPsec Services

Within the IPsec framework, additional security services are provided. An access control service ensures authorized use of the network, and an auditing service tracks all actions and events.

IPsec services can be configured on an interface-by-interface basis. Up to 127 inbound and 127 outbound security policies (customized) are supported on each IPsec interface.

How IPsec Works

IPsec services are bundled as an IP encryption packet. The packets resemble ordinary IP packets to Internet routing nodes; only the sending and receiving devices are involved in the encryption. IPsec packets are delivered over the Internet like ordinary IP packets to branch offices, corporate partners, or other remote organizations in a secure, encrypted, and private manner.

Several well-established technologies provide encryption and authentication at the application layer. IPsec adds security at the underlying network layer, providing a higher degree of security for all applications, including those without any security features of their own.

IPsec Protection

To configure a router with IPsec, you first configure the router interface as an IP interface. Then you add the IPsec software to the IP interface, creating a *security gateway.* A security gateway is a router between a trusted network (for example, the enterprise intranet) and an untrusted network (the Internet) that provides a security service such as IPsec.

The router interface is secured with inbound and outbound security *policies* that filter traffic to and from the router module. The data packets themselves are protected by the IPsec processing specified by security associations (SAs).

Figure 1-1 shows how IPsec can protect data communications within an enterprise and from external hosts.

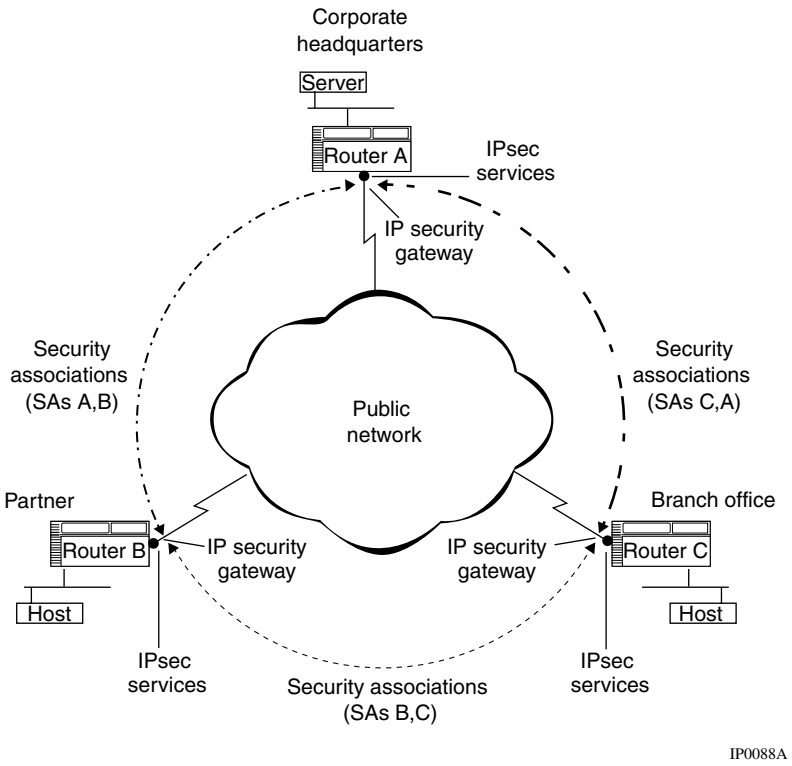

Figure 1-1. IPsec Environment: Unique SAs Between Routers

IPsec Tunnel Mode

When a security gateway exists at each end of a communication, the security associations between the gateways are said to be in *tunnel mode*. The tunnel metaphor refers to data being visible only at the beginning and end points of the communication. The IP packets protected by IPsec have regular, “visible” IP headers, but the packet contents are encrypted, and thus hidden. All BayRS IPsec communications occur in tunnel mode. Tunnel mode is especially effective for isolating and protecting enterprise traffic traveling across a public data network, as shown in Figure 1-1.

IPsec Elements

IPsec has three important constructs:

- Security gateways
- Security policies
- Security associations

In the IPsec context, hosts communicate across an untrusted network through security gateways (routers configured for IPsec interfaces). Security policies determine how the IPsec interfaces handle data packets for the hosts on both ends of a connection. Security associations apply IPsec services to data packets traveling between the security gateways.

Figure 1-2 shows the logical relationship between security policies and security associations.

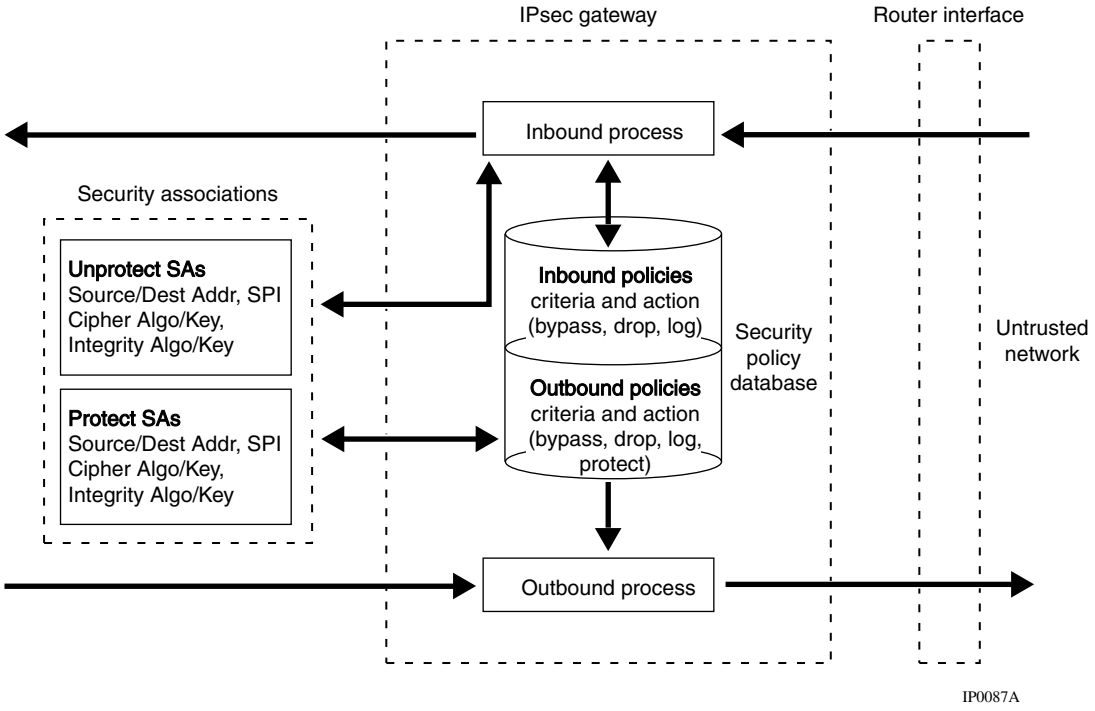

Figure 1-2. IPsec Security Gateways, Security Policies, and Security Associations

Security Gateways

A security gateway establishes SAs between router interfaces configured with IPsec software. A Nortel Networks router becomes a security gateway when you enable IPsec on a WAN or Ethernet interface. In this way, a Nortel Networks router operating as a security gateway provides IPsec services to its internal hosts and subnetworks.

Hosts or networks on the external side of a security gateway (typically, the overall Internet) are considered "untrusted." Hosts or subnetworks on the internal side of a security gateway (nodes on your local intranet) are considered "trusted" because they are controlled and securely managed by the same network administration (Figure 1-3).

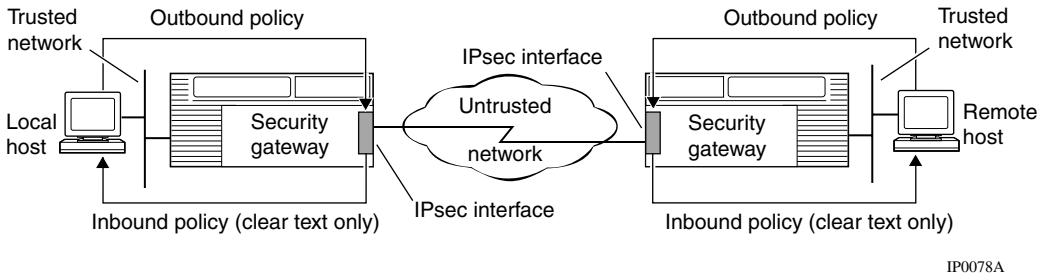

Figure 1-3. IPsec Security Gateways and Security Policies

When you add IPsec services to a router to create a security gateway, its internal hosts and subnetworks can communicate with external hosts that directly operate IPsec services, or with a remote security gateway that provides IPsec services for its set of hosts and subnetworks.

Security Policies

When you create an IPsec policy, you control which packets a security gateway protects, how it handles packets to or from particular addresses or in a particular protocol, and whether it logs information about these actions.

There are two types of IPsec policies: inbound and outbound. An inbound policy is used for data packets arriving at a security gateway, and an outbound policy is used for data packets leaving a security gateway. Each IPsec interface can support up to 127 inbound and 127 outbound security policies (refer to Figure 1-3).

The criteria (“selectors”) and action specifications used in your inbound and outbound policies are stored in the security policy database (SPD).

IPsec defaults in favor of more security rather than less. If an outbound or inbound packet does not match the criteria of any configured outbound or inbound policy in the SPD, the packet is dropped.

IPsec discards outbound clear-text data packets unless you explicitly configure a policy to bypass or protect them.

Policy Templates

Every IPsec policy is based on a *policy template*. A policy template is a predefined policy definition that you can use on any IP interface. The template specifies one or more criteria and an action to apply to incoming or outgoing data packets.

A policy template and every policy based on it must include at least one criterion (for example, an IP source address) and one action (for example, an outbound policy might specify a protect action). A policy template or policy can include two actions if one of the actions is logging. The criterion specification determines whether a data packet matches a particular security policy; the action specifies how the policy is applied to the packet.

The action specifications that you can include in inbound and outbound policies are discussed in the following two sections.

Inbound Policies

An inbound policy determines how a security gateway processes data packets received from an untrusted network. Every packet arriving at a security gateway is compared with the criteria to determine whether it matches an IPsec policy for that router. If the incoming packet matches a bypass policy, the router accepts the packet and, if the policy is so configured, logs it.

If the packet does not match any policy or matches a drop policy, the router rejects the packet. When a packet does not match any policy, IPsec’s default action is to drop the packet.

For an inbound security policy, the action can be one or two of the following:

- Drop
- Bypass
- Log

The drop and bypass actions are mutually exclusive. The log action can be used alone or it can be used in combination with the drop or bypass action.

Outbound Policies

An outbound policy determines how a security gateway processes data packets for transmission across an untrusted network. You must assign an outbound policy for all unicast traffic leaving an IPsec interface.

For an outbound policy, the action specification can be one or two of the following:

- Protect
- Drop
- Bypass
- Log

An outbound policy with a protect action specification is mapped to a Protect SA.

The drop, protect, and bypass actions are mutually exclusive. The log action can be used in combination with any one of the three, or it can be used alone.

Policy Criteria Specification

IPsec software inspects IP packet headers based on the specified criteria to determine whether a policy applies to a data packet.

You must include at least one of the following criteria, and you can specify all three criteria in an IPsec policy:

- IP source address
- IP destination address
- Protocol

To specify the protocol criterion, you must provide the numeric value assigned to the protocol for use over the Internet. You can specify only a single protocol value for each policy. The protocol number is represented in the 1-byte protocol field in an IP packet header.

For a list of protocol numbers, see Appendix E, "Protocol Numbers." To obtain the most recent list of the numeric values assigned to various protocols, see the Internet Assigned Numbers Authority (IANA) Web site at:

http://www.iana.org

The direct path to the list of legal values that you can specify for an IPsec policy protocol criterion is:

http://www.iana.org/assignments/protocol-numbers

Security Associations

A security association (SA) is a relationship in which two peers share the necessary information to securely protect and unprotect data. An IPsec SA is uniquely identified by an IP destination address, security parameter index (SPI), and security protocol identifier (for example, ESP in tunnel mode).

An IPsec policy determines which packets are handled and which IPsec security service (for example, confidentiality) is applied to the packets. You can apply one or more IPsec security services.

SAs themselves must be created and shared in a secure manner. To create SAs, you can use one of two methods:

- Use the automated security negotiation process provided by the Internet Key Exchange (IKE) protocol. (IKE is the recommended method.)
- Manually configure the sending and receiving devices with a *shared secret*. A shared secret is a unique security identifier.

Automated Security Associations Using IKE

Internet Key Exchange is an automated protocol to establish security associations over the Internet. (IKE is also referred to as the Internet Security Association Key Management Protocol with Oakley Key Determination, or ISAKMP/Oakley.) IKE negotiates, establishes, modifies, and deletes security associations.

To set up these security associations, IKE itself must create a confidential, secure connection between the sender and receiver. Authentication is accomplished using one or more of the following:

- **Preshared keys:** These are set up ahead of time at each node in a transaction.
- **Public key cryptography:** Using the RSA* public key algorithm, each member of a transaction authenticates itself to the other using the other member's public key to encrypt an authentication value.
- **Digital signature:** Each member of a transaction sends a digital signature to the other. The signatures are authenticated using the member's public key, obtained via an X.509 digital certificate.

Note: The BayRS implementation of IKE uses preshared keys only.

Manual Security Associations

Manually configuring security associations is a more cumbersome and labor-intensive process than using IKE. If possible, use IKE to make large-scale secure communications practical.

Manually configured SAs often rely on static, symmetric keys on communicating hosts or security gateways. Therefore, you must coordinate the configuration of the keys that will protect your information within your organization and with outside parties.

Security Associations for Bidirectional Traffic

An SA specifies the security services that are applied to data packets traveling in one direction between security gateways. To secure the traffic in both directions, the security gateway must have a Protect SA for data transmitted from the local IPsec interface and an Unprotect SA for data received by the local IPsec interface (Figure 1-4).

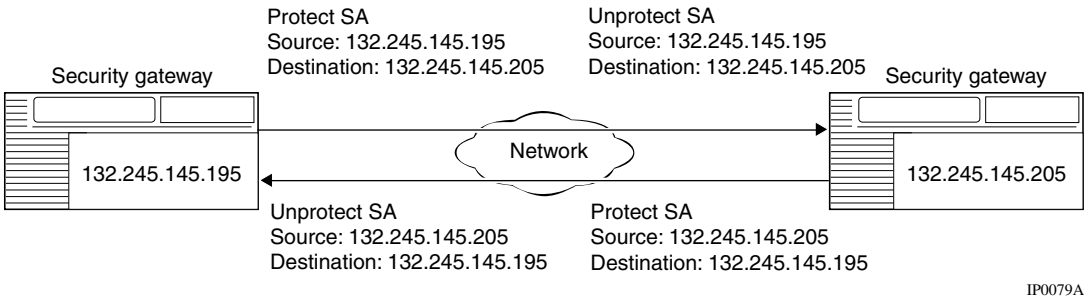

Figure 1-4. Security Associations for Bidirectional Traffic

Under most circumstances, you configure the IKE protocol to negotiate SAs between security gateways automatically. You can also manually configure SAs.

How IKE Negotiates Security Associations

The IKE protocol automates the process of IPsec SA configuration by creating an IKE SA for Protect SA and Unprotect SA negotiation. Each IKE peer sends IPsec SA parameter negotiation information in a secure IKE packet. The peers generate keys based on the agreed parameters and then verify each other's identity. After this verification is done, the IPsec SA is established.

The IKE protocol itself is secured through an IKE SA created using the Diffie-Hellman algorithm (Oakley) to determine the key, and the authentication methods described in "Automated Security Associations Using IKE" on page 1-11. The Nortel Networks implementation uses a preshared key.

Security Parameter Index

A *security parameter index* (SPI) is an arbitrary but unique 32-bit (4-byte) value that, when combined with the IP destination address and the numeric value of the security protocol used (ESP), uniquely identifies the SA for a data packet.

IPsec discards an incoming ESP packet if the SPI does not match any SA in the inbound security associations database (SAD).

Examples of Security Policies and Security Associations

Table 1-1 and Table 1-2 provide examples of how policies and SAs can be implemented. For more detailed examples of how to configure security policies and SAs, see Appendix C, "Configuration Examples."

In Table 1-1, each row defines the policy specification for the policy named in the first column. For example, the "blue" policy specifies two criteria—IP source address and IP destination address—and the "drop" action. This policy might be used to discard all traffic from an undesirable site.

The "yellow" and "green" policies specify a Protect SA action. The yellow policy applies to traffic in just one protocol (TCP) to a particular subnet; the green policy covers all traffic to particular addresses.

The "black" policy specifies the Protocol criterion only and the "bypass" action. In this case the protocol ICMP (typically used for ping functions) is passed through the security gateway without IPsec encryption.

You can define SA parameters (automatically or manually) for a policy immediately after you create the policy that uses them (Table 1-2).

Table 1-1. Security Policy Specifications

Policy Name	Protocol	IP Source Address	IP Destination Address	Action
Blue	(any)	IP address	IP address	Drop
Yellow	6 (TCP)	IP subnet	IP subnet	Protect SA
Green	(any)	Range of IP addresses	Range of IP addresses	Protect SA
Black	1 (ICMP)	Any IP address		Bypass

In Table 1-2, the IP source and destination addresses for the SA are the tunnel end points for the IPsec tunnel through which the traffic passes. Intermediate routers are unaware that the traffic is encrypted and pass it along just like any other packet.

Table 1-2. Manual SA Configurations

Security Association		SPI	Cipher			Integrity	
Source Address	**Destination Address**		**Algorithm**	**Key Length**	**Key**	**Algorithm**	**Key**
IP address	IP address	270	DES	40	Hex value	HMAC MD5	Hex value
IP address	IP address	260	DES	56	Hex value	HMAC MD5	Hex value

Security Protocols

IPsec can use two protocols to provide traffic security:

- Encapsulating Security Payload (ESP)
- Authentication Header (AH)

You can use either protocol or both to protect data packets on a VPN. Generally, only one protocol is necessary.

Note: The Nortel Networks implementation of IPsec uses ESP only. Nortel Networks does not implement the AH protocol because the same functions are available in ESP.

Encapsulating Security Payload (ESP) Protocol

The ESP protocol provides confidentiality (encryption) services. It can also provide data integrity, data origin authentication, and an anti-replay service.

- Data integrity ensures that the data has not been altered.
- Data origin authentication validates the sending and receiving parties.
- Anti-replay service ensures that the receiver receives and processes each packet only once.

ESP applies the following algorithms and transform identifiers to deliver its services:

- DES (56-bit)
- 40-bit DES (manual keying only)
- Triple DES (3DES) (3DES IPsec option only)
- HMAC Message Digest 5 (MD5)
- HMAC SHA1

ESP uses the DES algorithm or the Triple DES (3DES) algorithm for encryption. ESP uses Hashing Message Authentication Code Message Digest 5 (HMAC MD5) or HMAC SHA1 transform identifiers for authentication.

ESP uses the CBC mode of the DES encryption algorithm. CBC is considered the most secure mode of DES. A 56-bit or 40-bit number, known as a *key*, controls encryption and decryption. Key management is automated through IKE, or can be controlled manually.

Both sides of an SA must use the same encryption service. Normally, you should use the stronger 56-bit DES key for greater security, or triple DES if appropriate. However, if you are communicating with a security gateway that is limited to a 40-bit DES key due to cryptography export restrictions, you must use the 40-bit key.

When ESP protection is used in tunnel mode, an “outer” IP header specifies the IPsec processing destination, and an “inner” IP header specifies the (actual) target destination for the packet. The security protocol header appears after the outer IP header and before the inner one. Only the tunneled packet is protected, not the outer header.

Authentication Header (AH) Protocol

The AH protocol provides data integrity, data origin authentication, and optional anti-replay services. It provides encryption services to the header only, not to the entire IP packet.

The AH protocol uses HMAC MD5 and HMAC SHA1 transform identifiers. The AH protocol is not used in the Nortel Networks implementation of IPsec.

Internet Key Exchange Protocol

The IKE protocol negotiates and provides private and authenticated keying material for security associations. Before IKE can provide keying material, the IKE protocol itself must be authenticated; that is, some other mechanism must create an IKE security association between the security gateways that IKE is servicing.

BayRS software creates an IKE SA through a preshared authentication key. IKE creates and changes IPsec SAs dynamically, with no user intervention necessary.

To negotiate a security association, IKE peers form a security association (an IKE SA) between themselves. The IKE SA protects the negotiation of the IPsec SA parameters and key exchange.

The IKE protocol can change IPsec and IKE SA keys based on preconfigured criteria such as elapsed time or number of bytes sent.

Perfect Forward Secrecy

Perfect forward secrecy (PFS) disassociates each IPsec SA key from others in the same IKE-negotiated security association. To implement PFS, IKE uses the Diffie-Hellman algorithm to exchange keys for each SA. This means that as IKE and IPsec SAs are automatically rekeyed over the course of IPsec peer communication, old keys, if compromised, cannot be used to derive previous or future keys used for other SAs.

With PFS, if an intruder manages to break an encryption key, the intruder gains access to a limited amount of data (packets protected by a single SA).

Performance Considerations

IPsec performance can vary greatly and can affect overall router performance. Factors that affect performance include:

- Cryptographic algorithms used by IPsec
- Other protocols and features running on the slot that share the same CPU resources as IPsec
- Processing power of the BayRS router

You can optimize performance by using the information in this section to plan and manage CPU resources on BayRS routers configured with IPsec.

Greater security can adversely affect performance. Before you deploy IPsec, identify the data traffic that must be protected. Effective traffic analysis can result in minimal performance impact on the router. Configure IPsec to bypass traffic that does not need to be protected, thereby reducing the CPU resources used.

Also, the amount of CPU resources required varies significantly for different encryption and authentication algorithms. These algorithms are listed in order of increasing CPU consumption and security:

- MD5
- SHA1
- DES
- DES with MD5
- DES with SHA1
- 3DES
- 3DES with MD5
- 3DES with SHA1

In addition, the key generation and periodic rekeying done by IKE Diffie-Hellman imposes a CPU burden. For example, 3DES + SHA1 traffic with aggressive phase 1 (IKE) and IPsec rekeying (for example, every 10 minutes) can cause significant performance degradation under heavy traffic loads. Therefore, consider the keying intervals for IKE and for IPsec that you choose during configuration. Less frequent rekeying reduces the burden on the CPU. Consider rekeying the phase 1 (IKE) SAs less frequently than the IPsec SAs.

Finally, packet size affects the performance of the router. Smaller packet sizes at a given data rate impose a greater processing load than larger packet sizes. For example, BayRS IPsec on a BN router can fill a 2 Mb/s WAN pipe with bidirectional DES-encrypted traffic.

You may experience SNMP timeouts during periods when the router is carrying peak loads of protected traffic.

Chapter 2
Installing IPsec

This chapter describes how to install and prepare to use IPsec. Before you configure IPsec, you must perform the tasks described in this chapter.

Topic	Page
Upgrading Router Software	2-1
Installing the IPsec Software	2-2
Securing Your Site	2-4
Securing Your Configuration	2-4
Creating and Using NPKs	2-5

Upgrading Router Software

To install the IPsec software, the router must be running, at a minimum, BayRS Version 13.10 and Site Manager Version 7.10. To use Internet Key Exchange (IKE) and automated security associations (SAs), BayRS Version 13.20 and Site Manager Version 7.20 or later are required.

If you are upgrading your router software, copy the router image from the upgrade CD to a directory on your hard drive. To modify an existing image, first use the Router Files Manager to transfer the image to a directory on your hard drive.

For instructions on upgrading router software, see *Upgrading Routers to BayRS Version 15.x*. For information about the Image Builder, the Router Files Manager, and booting routers, see *Configuring and Managing Routers with Site Manager.*

Installing the IPsec Software

Before you can enable and use IPsec services, you must create an IPsec-capable router image. You create this image during the installation process. The installation instructions that appear on the IPsec software CD are duplicated in this section.

The IPsec software CD contains a capi.exe and a capi.ppc file.

Note: To use Triple DES (3DES) encryption with IPsec, you must purchase the 3DES IPsec Option CD and install the capi.exe or capi.ppc file from it. The version of the capi.exe and capi.ppc files on this CD includes both 56-bit DES encryption and the stronger 3DES encryption.

Table 2-1 identifies which file to use when you install the IPsec software.

Table 2-1. IPsec Installation Files by Router Platform

File Name	Routers
capi.exe	AN, ARN, ASN, BN, and System 5000
capi.ppc	Passport 2430 and Passport 5430

To install the IPsec software:

1. **Insert the IPsec software CD into the CD-ROM drive.**
2. **Open or create a directory for your router platform (for example, BN).**
3. **Copy the files *<platform>*.exe (for example, bn.exe for the BN) and capi.exe or capi.ppc from the CD to the platform directory.**
4. **From Site Manager, start the Image Builder (choose Tools > Image Builder).**
5. **Open the image (for example, bn.exe) in the router platform directory.**

   Note that “Available Components” is empty and that “Current Components” lists the executables.
6. **Click on Details.**

   Under 4003x Baseline Router Software, select capi.exe or capi.ppc.

7. **Click on Remove.**

   The file capi.exe or capi.ppc is now listed under Available Components.

8. **Choose File > Save to save the image.**

9. **Exit the Image Builder.**

Completing the Installation Process

To complete the installation process:

1. **Open the Image Builder directory:**

   - On a PC, the default directory is wf\builder.dir\rel<*release_number*>.
   - On a UNIX platform, the default directory is ~.builder_dir/rel<*release_number*>.

2. **Remove the capi.exe or capi.ppc file from the Image Builder directory and make note of its file size (1 to 4 KB).**

3. **Copy the new capi.exe or capi.ppc file from the router platform directory (for example, BN or Passport 5430) to the Image Builder directory.**

4. **Restart the Image Builder and open the image from which you removed the capi.exe or capi.ppc file.**

5. **Click on Details in the Available Components box.**

6. **Select capi.exe or capi.ppc and click on Add.**

7. **Check the size of the capi.exe or capi.ppc file to verify that it is significantly larger than the file size noted in step 2 (for example, capi.exe for the BN should be 82 KB).**

   If the file size is not larger, you have not loaded the IPsec software. Repeat this procedure or call the Nortel Networks Technical Solutions Center for assistance.

8. **Save the modified image that includes IPsec to a new file.**

9. **Exit the Image Builder.**

10. **Copy this new image to the router.**

11. **Reboot the router.**

Securing Your Site

To enforce IPsec, carefully restrict unauthorized access to the routers that encrypt data and the workstations that you use to configure IPsec. Keep in mind that the encryption standards that IPsec uses are public. Your data is secure only if you properly protect the encryption and authentication keys. The configuration files that contain these keys include safeguards to prevent unauthorized access.

Securing Your Configuration

Store any files containing encryption keys on diskettes or other removable media, and keep the media in a secure place. Physically protecting your equipment is always a good strategy and the easiest way to prevent unauthorized access to these files.

Always configure your node protection keys (NPKs) locally, not over a network. When you connect a PC or a workstation to a router console port to configure encryption, use a machine that is not connected to any other equipment. Make sure that you also protect the routers on which the NPKs reside.

Encryption Keys

IPsec uses a hierarchy of keys to protect and transmit data:

- Node protection key (NPK): Encrypts the manual cipher and integrity keys for storage on the router or transfer from Site Manager.
  - — Cipher key: Encrypts data that travels across the network in the IKE or ESP payload. (IKE cipher and integrity keys are not stored on the router.)
  - — Integrity key: Calculates the integrity check value (ICV), which is used at the data packet destination to detect any unauthorized modification of the ESP or IKE data.
- Preshared authentication key: Authenticates the IKE SA used to protect the negotiation and rekeying of IPsec SAs.

Caution: The NPK is the most critical key in the hierarchy. If the NPK is compromised, all encrypted data on the router can be compromised.

Random Number Generator

The router software uses the secure random number generator (RNG) to generate initialization vectors (IVs) that are used in the ESP DES encryption transform. These values are statistically random. As its source, the RNG uses a *seed* that you supply from the Technician Interface secure shell. See "Entering an Initial NPK and a Seed for Encryption" on page 2-6.

Creating and Using NPKs

The NPK encrypts manually configured IPsec ESP cipher and integrity keys or IKE preshared authentication keys for management information base (MIB) storage. It does not encrypt, decrypt, or authenticate data.

The NPK is stored in the router nonvolatile random access memory (NVRAM). Its fingerprint, which is a 128-bit version of the NPK generated by a hash algorithm, is stored in the MIB. For encryption to occur, the NPK and its fingerprint in the MIB must match.

Create and configure a different NPK for each secure router on your network. The NPK should be different on every router because, if an NPK is compromised, the security gateway for the router is compromised. If the same NPK is used for all secure routers, the entire network could be compromised.

Caution: Make sure that you protect all files where NPKs are stored. Store your NPKs on removable media (for example, diskettes) and keep the media in a secure location.

Generating NPKs

You create NPKs using the Technician Interface secure shell. You must then enter the same NPKs into the Site Manager NPK parameter for that router.

To generate an NPK, use a method available at your site to create random 16-digit hexadecimal numbers. Write down the generated number; you will need to enter it on the router.

Entering an Initial NPK and a Seed for Encryption

Before you can enable IPsec on a router, you must enter an initial NPK and create a seed for use by IPsec. You enter the NPK into a router locally, using the console port and the secure shell section of the Technician Interface. A password protects access to the secure shell.

IPsec uses the NPK to encrypt and decrypt the cipher and integrity keys, and it uses the seed specified with the **kseed** command to generate random numbers needed by IPsec and IKE.

You cannot access the NPK or the password using the MIB or the routine Technician Interface debug commands, nor can you invoke the secure shell in a Telnet session.

Caution: Never use a terminal server to enter the NPK. Instead, use a laptop computer that you can attach directly to the router. Protect the file containing NPKs on the laptop.

To enter an initial NPK and a seed for encryption:

1. **If necessary, create a password for the Technician Interface secure shell by entering the following command at the Technician Interface prompt:**

   kpassword *<password>*

   <password> is an alphanumeric string of up to 16 characters. When you are prompted for your old password, press Enter.

2. **At the Technician Interface prompt, enter the secure shell by entering the following command:**

   ksession

3. **Enter your password.**

   If you enter the **ksession** command before you set a password, you will be prompted to create one. Use the **kpassword** command described in step 1.

   The prompt changes to `SSHELL`.

4. **Begin generating the encryption seed by entering:**

   kseed

   The secure shell prompts you for a random seed value.

5. **Type a random set of keystrokes. The secure shell informs you when you have typed the required number of keystrokes.**

6. **Enter the following command:**

   kset npk 0x*<NPK_value>*

   <NPK_value> is the 16-digit hexadecimal NPK value that you assigned to the router that you are configuring. For more information, see "Generating NPKs" on page 2-5.

   The **kset npk** command stores your NPK value in the router NVRAM and calculates a hash of this value that it stores in the router MIB.

7. **Save the configuration by entering:**

   save config *<config_file_name>*

   config_file_name is the name that you assign to the configuration file. You cannot exit the secure shell without saving the configuration. This step is necessary so that when you reboot the router with the saved configuration file, the hash of the NPK in the MIB corresponds to the NPK in NVRAM.

8. **Exit the secure shell by entering the following command:**

   kexit

Changing an NPK

To maintain security, periodically change the NPK on each router.

To change an NPK:

1. **At the Technician Interface prompt, enter the secure shell by entering the following command:**

   ksession

2. **Enter your password.**

   The prompt changes to SSHELL.

3. **Begin generating the encryption seed by entering:**

   kseed

   The secure shell prompts you for a random seed value.

4. **Type a random set of keystrokes. The secure shell informs you when you have typed the required number of keystrokes.**

5. **Enter the following command:**

   kset npk 0x*<NPK_value>*

   <NPK_value> is the new 16-digit hexadecimal NPK value that you are assigning to the router.

   The new NPK overwrites the original, and IPsec uses the new NPK value. However, this command does not change the hashed NPK value in the MIB.

6. **To change the NPK value used by the MIB, enter the following command:**

   ktranslate *<old_NPK_value>*

   <old_NPK_value> is the original NPK value.

   The older hashed NPK in the MIB is decrypted, and the new NPK is hashed and stored in the MIB. The MIB now has the same NPK as the router.

7. **Save the configuration file.**

Monitoring NPKs

If the NPK on a router does not match the NPK in the MIB, IPsec services do not work. This situation usually occurs when you change a CPU board in a router slot, and the slot now lacks the current NPK, or you revert to an older configuration that is protected by an older NPK.

View the router log to make sure that the NPK for each slot matches the NPK value in the MIB. If the values do not match, use the secure shell to change either the router NPK value or the MIB NPK value. For more information about changing NPKs, see "Changing an NPK" on page 2-7.

To view the router log events specific to an NPK in the Technician Interface, enter:

log -ffwidt -eKEYMGR

Chapter 3
Starting IPsec

This chapter provides instructions for configuring IPsec on an interface.

Topic	Page
Enabling IPsec and IKE	3-1
Creating Policies	3-2
Creating Security Associations	3-7

Enabling IPsec and IKE

To enable IPsec, configure an IP interface, then add IPsec services to the interface to create a security gateway. To enable IPsec and IKE, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the Ethernet or WAN connector on which you want to configure an IPsec interface.	The Add Circuit window opens.
2. Click on **OK**.	If you selected a WAN connector, the WAN Protocols window opens. If you selected an Ethernet interface, the Select Protocols window opens (go to step 4).
3. In the WAN Protocols window, choose **PPP** or **Frame Relay** and click on **OK**.	The Select Protocols window opens.

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
4. In the Select Protocols window, choose **IKE** and click on **OK**. Choosing **IKE** automatically selects **IPSEC** and **IP**.	The IP Configuration window opens.
5. Set the following parameters: • **IP Address** • **Subnet Mask** Click on **Help** or see *Configuring IP, ARP, RARP, RIP, and OSPF Services*.	
6. Click on **OK**.	The IPsec Configuration for Interface window opens.

When you configure IPsec on an interface for the first time, configure the menu items displayed in the IPsec Configuration for Interface window in sequence, starting with the first item, Outbound Policies. You must set an outbound policy for an IPsec interface before you can link an SA to it.

Creating Policies

You create inbound and outbound policies for an IPsec interface by using a policy template. A policy template is a policy definition that you create. You can use a policy template on any IPsec interface on the router.

Each template contains a complete policy specification (criteria, range, and action) for the interface, so each policy is completely specified by the template. You can modify an individual policy to fit the needs of a specific interface, independent of the template specifications.

Specifying Criteria

The policy criteria determine the portion of a packet header (IP source address, IP destination address, protocol number) that is examined by IPsec. For each criterion, you specify a range of values. The range represents the actual criteria values (for example, the IP addresses that are compared to the address of a packet).

Specifying an Action

The action specification in a policy controls how a packet that matches the specified criteria is processed. You decide how you want packets to be processed and apply one or more policies to implement your decision.

With IPsec, a packet can be processed in one of three ways:

- The packet can be dropped.
- The packet can be transmitted or received without alteration.
- The packet can be protected (outbound only). In this case, an SA is linked to the policy.

In addition to processing a packet or in the absence of a processing action, packet receipt or transmission can be recorded in a log. The corresponding policy actions are:

- Drop
- Bypass
- Protect (outbound only)
- Log (a message is written to the router log)

The drop, bypass, and protect actions are mutually exclusive. You can specify a logging action for any of these, or in their absence. If an incoming packet that does not match any configured policy arrives at an IPsec interface, it is dropped.

Policy Considerations

When you configure an interface with IPsec, all inbound and outbound traffic on that interface is processed by IPsec, including traffic being forwarded. (However, see "Configuring IPsec and NAT on One Interface" on page 1-2.)

For unicast traffic containing routing or control information, consider configuring policies that allow such traffic to bypass IPsec. For example, to allow ICMP traffic (such as "ping" or "destination unreachable" messages) to bypass IPsec processing, configure the first policy for the interface with the protocol criterion set to 1 (ICMP) and the action specification set to bypass.

If a data packet matches the criteria for more than one policy, the first matching policy is applied.

Creating an Outbound Policy Template and Policy

To create an outbound policy template and policy, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the IPsec Configuration for Interface window, click on **Outbound Policies**.	The IPsec Outbound Policies window opens.
2. Click on **Template**.	The IPsec Policy Template Management window opens.
3. Click on **Create**.	The Create IPsec Template window opens.
4. In the **Policy Name** field, type a name for the template. For a description of this parameter, see page A-4.	
5. Use the **Criteria** menu to specify ranges for the IP source addresses, IP destination addresses, and protocol criteria. **Note:** If you plan to specify the protect action, configure both a source and a destination IP address range.	
6. Use the **Action** menu to specify the action that you want applied to traffic with the criteria that you just defined.	
7. Click on **OK**.	You return to the IPsec Policy Template Management window.
8. To create other policy templates, repeat steps 3 through 7.	
9. Click on **Done**.	You return to the IPsec Outbound Policies window.
10. Click on **Add Policy**.	The Create Outbound Policy window opens.

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
11. In the **Policy Name** field, type a name for the policy. For a description of this parameter, see page A-4.	
12. From the Templates list, select a template on which to base this policy.	
13. Click on **OK**.	If the policy includes a Protect action, the Choose SA Type dialog box opens. Go to step 14. If the policy does not include a Protect action, you return to the IPsec Outbound Policies window. Go to step 15.
14. In the Choose SA Type dialog box, click on **Automated SA** or **Manual SA**. • If you chose Automated SA, go to step 4 on page 3-8. • If you chose Manual SA, go to step 2 on page 3-10.	
15. To create other outbound policies, repeat steps 10 through 13.	
16. Click on **Done**.	You return to the IPsec Configuration for Interface window.
17. Go to "Creating an Inbound Policy Template and Policy" on page 3-6.	

Creating an Inbound Policy Template and Policy

The process for creating inbound policies is almost identical to the process for creating outbound policies, with the exception that you cannot specify a protect action for an inbound policy.

To create an inbound policy template and policy, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the IPsec Configuration for Interface window, click on **Inbound Policies**.	The IPsec Inbound Policies window opens.
2. Click on **Template**.	The IPsec Policy Template Management window opens.
3. Click on **Create**.	The Create IPsec Template window opens.
4. In the **Policy Name** field, type a name for the template. For a description of this parameter, see page A-4.	
5. Use the **Criteria** menu to specify ranges for the IP source addresses, IP destination addresses, and protocol criteria.	
6. Use the **Action** menu to specify the action that you want applied to traffic with the criteria that you just defined.	
7. Click on **OK**.	You return to the IPsec Policy Template Management window.
8. To create other policy templates, repeat steps 3 through 7.	
9. Click on **Done**.	You return to the IPsec Inbound Policies window.
10. Click on **Add Policy**.	The Create Inbound Policy window opens.
11. In the **Policy Name** field, type a name for the policy. For a description of this parameter, see page A-4.	

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
12. From the Templates list, select a template on which to base this policy.	
13. Click on **OK**.	You return to the IPsec Inbound Policies window.
14. To create other inbound policies, repeat steps 10 through 13.	
15. Click on **Done**.	You return to the IPsec Configuration for Interface window.

Creating Security Associations

Security associations enable you to provide bidirectional protection for data packets traveling between two routers. Each SA establishes security for data passing in a single direction. A pair of SAs (a Protect SA and an Unprotect SA) are created, either automatically by IKE or manually by you, for any IPsec policy configured on a security gateway. Each SA includes security information such as algorithm and keys.

Note: You should use automated SA creation (IKE) for greater security and decreased configuration management overhead.

Automated SA Creation

IKE creates automated SAs based on the proposals that you configure for an IPsec outbound policy in Site Manager. Each proposal specifies an encryption transform, an authentication transform, or both for the automated SA. You do not need to specify keys for automated SAs, because IKE creates them dynamically.

For examples of how to configure automated SAs, see "Automated SA (IKE) Policy Examples" on page C-2.

You can configure up to four proposals for a policy, in order of preference. IKE negotiates an automated SA based on the first proposal that matches one configured on the remote security gateway. IKE creates both the inbound and the outbound SAs based on the results of the proposal negotiation.

Creating an Outbound Protect Policy with Automated SAs (IKE)

To use IKE to create automated SAs, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the IPsec Configuration for Interface window, click on **Outbound Policies**.	The IPsec Outbound Policies window opens.
2. Click on **Add Policy**.	The Create Outbound Policy window opens.
3. Type a name for the policy, choose a template containing a Protect action, and then click on **OK**.	The Choose SA Type dialog box opens.
4. Click on **Automated SA**.	If the NPK has not yet been entered in Site Manager, the Node Protection Key dialog box opens. Otherwise, the Add Proposal to Policy window opens.
5. If necessary, set the **Node Protection Key (8 Byte Hex)** parameter and click on **OK**. Click on **Help** or see the parameter description on page A-2. For more information, see "Creating and Using NPKs" on page 2-5.	The Add Proposal to Policy window opens.
6. From the PFS menu, choose **Enabled** or **Disabled** to enable or disable perfect forward secrecy (PFS).	
7. From the Anti-Replay Window Size menu, choose Disabled or select a packet size.	
8. Click on **Add** to specify the SA destination address and preshared key for IKE SAs.	The Add IKE SA Destination window opens.
9. Enter the SA name, destination IP address, and preshared key. Click on **Help** or see the parameter descriptions beginning on page A-10.	
10. Click on **Done**.	You return to the Add Proposal to Policy window.

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
11. Click on **New Proposal** to create an encryption type proposal that IKE will use when negotiating SA keys with the SA destination node.	The Edit IPsec Proposal window opens.
12. Type a proposal name, choose one or more encryption methods for the proposal, choose an Expiry type, and change the Expiry Type value, if desired.	
13. Click on **Done**.	You return to the Add Proposal to Policy window. Repeat steps 9 and 10 to create additional proposals, if needed.
14. In the Add Proposal to Policy window, choose the SA destination you created, and then choose from one to four proposals (in order of priority) from the Proposals menu.	
15. Click on **OK**.	You return to the IPsec Outbound Policies window.
16. Click on **Done**.	You return to the IPsec Configuration for Interface window.

About Manual SA Creation

To protect (encrypt or authenticate) data packets leaving the local IPsec interface, create a Protect SA and link it to a Protect outbound policy. To decrypt or authenticate incoming packets at the local IPsec interface, create an Unprotect SA. (The Unprotect SA does not need to be linked to a policy.) Then, do the same for the IPsec interface on the remote router.

The cipher and integrity algorithms and keys that you specify in SAs must be identical on both ends of a connection. You must select the cipher, the integrity service, or both within the Protect and Unprotect SA parameters. For example, the cipher key in a Protect SA on the local IP interface must match the cipher key in the Unprotect SA on the remote router IP interface.

Note: You must configure manual SAs to encrypt, authenticate, or both. Site Manager does not allow you to create an SA if both the Cipher Algorithm and the Integrity Algorithm parameters are set to None.

For examples of how to configure manual SAs, see "Manual Protect and Unprotect SA Configuration" on page C-10.

Creating a Protect SA Manually

To create a Protect SA manually, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the IPsec Configuration for Interface window, click on **Manual Protect SA**.	The Protect SA List for Interface window opens.
2. Click on **Add**.	The IPsec Manual Protect SA window opens.
3. Set the following parameters: • **SA Source IP Address** • **SA Destination IP Address** • **Security Parameter Index** • **Cipher Algorithm** • **Cipher Key Length** • **Cipher Key (8 Byte Hex)** • **Integrity Algorithm** • **Integrity Key (16 Byte Hex)** Position the cursor in a field and click on **Values** to display a menu of valid options, if applicable. Click on **Help**, or see the parameter descriptions beginning on page A-5 for more information.	
4. Click on **OK**.	You return to the Protect SA List for Interface window.
5. Repeat steps 2 through 4 to create additional Protect SAs, if necessary. Click on **Done** when you are finished.	You return to the IPsec Configuration for Interface window.

Creating an Unprotect SA Manually

To create an Unprotect SA manually, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the IPsec Configuration for Interface window, click on **Manual Unprotect SA**.	The Unprotect SA List for Interface window opens.
2. Click on **Add**.	The IPsec Manual Unprotect SA window opens.
3. Set the following parameters: • **SA Source IP Address** • **SA Destination IP Address** • **Security Parameter Index** • **Cipher Algorithm** • **Cipher Key Length** • **Cipher Key (8 Byte Hex)** • **Integrity Algorithm** • **Integrity Key (16 Byte Hex)** Position the cursor in a field and click on **Values** to display a menu of valid options, if applicable. Click on **Help**, or see the parameter descriptions beginning on page A-5 for more information.	
4. Click on **OK**.	You return to the Unprotect SA List for Interface window.
5. Repeat steps 2 through 4 to create additional Unprotect SAs, if necessary. Click on **Done** when you are finished.	You return to the IPsec Configuration for Interface window.

Chapter 4
Customizing IPsec

This chapter provides information about changing an existing IPsec configuration. For information about creating an initial IPsec configuration, see Chapter 3, "Starting IPsec."

This chapter includes the following information:

Topic	Page
Changing Existing Policies	4-1
Changing Existing Security Associations	4-8
Disabling IPsec	4-11

Changing Existing Policies

This section provides instructions for editing existing policies and for adding policies to an existing configuration.

Topic	Page
Editing a Policy	4-2
Adding a Policy	4-3
Reordering Policies	4-6

Editing a Policy

To edit an existing IPsec policy on a router interface, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, choose **Protocols**.	The Protocols menu opens.
2. Choose **IP**.	The IP menu opens.
3. Choose **IP Security**.	The IPsec menu opens.
4. Choose **Outbound Policies** or **Inbound Policies**.	The IPsec Outbound Policies or the IPsec Inbound Policies window opens.
5. Select the policy that you want to edit from the list.	
6. Click on **Edit Policy**.	The Edit IPsec Outbound Policies or the Edit IPsec Inbound Policies window opens.
7. Edit the policy specification as follows: • To remove an action or criterion, select it in the Policy Information text field and click on **Delete**. • To change policy criteria, select the appropriate line. The range values appear in the Range Min. and Range Max. boxes below the text field. Make changes in these boxes and click on **Modify**. • To add an action, choose **Log**, **Protect**, or **Bypass** from the **Action** menu. • To add criteria, choose **IP Source Address**, **IP Destination Address**, or **Protocol** from the **Criteria** menu.	
8. Click on **OK**.	You return to the IPsec Outbound Policies or the IPsec Inbound Policies window.
9. Click on **Done**.	You return to the Configuration Manager window.

Adding a Policy

The procedure to add an IPsec policy to an existing IPsec interface depends on the connector type and the WAN protocol used on a WAN interface. Choose the appropriate procedure for Ethernet and PPP or for frame relay.

Ethernet Interface or WAN Interface with PPP

To add an IPsec policy to an Ethernet interface or to an interface configured with PPP, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the connector on which you want to add an IPsec policy.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Circuit Definition window opens.
3. From the **Protocols** menu, choose **Edit IP > IP Security > Outbound Policies** or **Inbound Policies**.	The IPsec Inbound Policies or the IPsec Outbound Policies window opens.
4. Click on **Add Policy.**	The Create Inbound Policy or the Create Outbound Policy window opens.
5. In the **Policy Name** field, type a name for the policy. Click on **Help** or see the parameter description on page A-4.	
6. From the **Interfaces** list, select the interface where you want to add the policy.	
7. From the **Templates** list, select a template on which to base the policy.	
8. Click on **OK**.	If the policy includes a protect action, the Choose SA Type dialog box opens.

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
9. If the Choose SA Type dialog opens, do one of the following: • Choose **Automated SA** and follow the instructions in "Creating an Outbound Protect Policy with Automated SAs (IKE)" on page 3-8. • Choose **Manual SA** and follow the instructions in "Creating a Protect SA Manually" on page 3-10.	You return to the IPsec Inbound Policies or IPsec Outbound Policies window.
10. Click on **Done**.	You return to the Circuit Definition window.
11. Choose **File > Exit**.	You return to the Configuration Manager window.

WAN Interface with Frame Relay

To add an IPsec policy to a router interface configured with frame relay, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the WAN connector on which you want to add an IPsec policy.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Frame Relay Circuit Definition window opens.
3. Click on **Services**.	The Frame Relay Service List window opens.
4. Select a service record from the list.	
5. From the **Protocols** menu, choose **Edit IP > IP Security > Outbound Policies** or **Inbound Policies**.	The IPsec Inbound Policies or the IPsec Outbound Policies window opens.
6. Click on **Add Policy.**	The Create Inbound Policy or the Create Outbound Policy window opens.

(continued)

Site Manager Procedure *(continued)*	
You do this	**System responds**
7. In the **Policy Name** field, type a name for the policy. Click on **Help** or see the parameter description on page A-4.	
8. From the **Interfaces** list, select the interface where you want to add the policy.	
9. From the **Templates** list, select a template on which to base the policy.	
10. Click on **OK**.	If the policy includes a protect action, the Choose SA Type dialog box opens.
11. If the Choose SA Type dialog opens, do one of the following: • Choose **Automated SA** and follow the instructions in "Creating an Outbound Protect Policy with Automated SAs (IKE)" on page 3-8. • Choose **Manual SA** and follow the instructions in "Creating a Protect SA Manually" on page 3-10.	You return to the IPsec Inbound Policies or IPsec Outbound Policies window.
12. Click on **Done**.	You return to the Frame Relay Service List window.
13. Click on **Done**.	You return to the Frame Relay Circuit Definition window.
14. Click on **Done**.	You return to the Configuration Manager window.

Reordering Policies

The procedure to reorder IPsec policies on a router interface depends on the connector type and the WAN protocol used on a WAN interface. Choose the appropriate procedure for Ethernet and PPP or for frame relay.

Ethernet Interface or WAN Interface with PPP

To change the order in which existing IPsec policies are applied on an Ethernet interface or on a WAN interface configured with PPP, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the connector on which you want to reorder IPsec policies.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Circuit Definition window opens.
3. From the **Protocols** menu, choose **Edit IP > IP Security > Outbound Policies** or **Inbound Policies**.	The IPsec Inbound Policies or the IPsec Outbound Policies window opens.
4. Select the policy that you want to move and click on **Reorder**.	The Change Precedence dialog box opens.
5. Change the order in which the policy is applied: • To move the policy up, click on **Insert Before**. • To move the policy down, click on **Insert After**.	
6. In the **Precedence Number** field, type the number of the policy before or after which you want to insert the selected policy.	
7. Click on **OK**.	You return to the IPsec Inbound Policies or the IPsec Outbound Policies window. The policies reflect the new order that you specified.
8. Click on **Done**.	You return to the Circuit Definition window.
9. Choose **File > Exit**.	You return to the Configuration Manager window.

WAN Interface with Frame Relay

To change the order in which existing IPsec policies are applied on a router interface configured with frame relay, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the WAN connector on which you want to reorder IPsec policies.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Frame Relay Circuit Definition window opens.
3. Click on **Services**.	The Frame Relay Service List window opens.
4. Select a service record from the list.	
5. From the **Protocols** menu, choose **Edit IP > IP Security > Outbound Policies** or **Inbound Policies**.	The IPsec Inbound Policies or the IPsec Outbound Policies window opens.
6. Select the policy that you want to move and click on **Reorder**.	The Change Precedence dialog box opens.
7. Change the order in which the policy is applied: • To move the policy up, click on **Insert Before**. • To move the policy down, click on **Insert After**.	
8. In the **Precedence Number** field, type the number of the policy before or after which you want to insert the selected policy.	
9. Click on **OK**.	You return to the IPsec Inbound Policies or the IPsec Outbound Policies window. The policies reflect the new order that you specified.
10. Click on **Done**.	You return to the Frame Relay Service List window.
11. Click on **Done**.	You return to the Frame Relay Circuit Definition window.
12. Click on **Done**.	You return to the Configuration Manager window.

Changing Existing Security Associations

To ensure the integrity of SAs, vital information such as IKE preshared keys or manual SA shared secrets needs to be changed from time to time. You may also want to change other settings associated with an SA.

Modifying Automated SAs (IKE)

To create a new automated SA, you must add an outbound protect policy. For instructions, see "Adding a Policy" on page 4-3.

To change the IKE settings for an existing automated SA on a router, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, choose **Protocols**.	The Protocols menu opens.
2. Choose **IP**.	The IP menu opens.
3. Choose **IKE**.	The Edit IKE SA Destination window opens. A list of SAs specifying source and destination appears.
4. Click on the SA that you want to modify.	
5. Set one or more of the following parameters: • **SA Name** • **Pre-shared Key Type** • **Pre-shared Key (ascii)** • **Pre-shared Key (hex)** • **Expiry Value Minutes** Click on **Help** or see the parameter descriptions beginning on page A-10.	
6. Click on **Apply**.	
7. Click on **Done**.	You return to the Configuration Manager window.

Modifying Manual SAs

The procedure to modify manual SAs on a router interface depends on the connector type and the WAN protocol used on a WAN interface. Choose the appropriate procedure for Ethernet and PPP or for frame relay.

Ethernet Interface or WAN Interface with PPP

To change or add manual SAs on an Ethernet interface or on a WAN interface configured with PPP, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the connector on which you want to add or change manual SAs.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Circuit Definition window opens.
3. From the **Protocols** menu, choose **Edit IP > IP Security > Manual Protect SAs** or **Manual Unprotect SAs**.	You may be prompted for the node protection key. If not, go to step 5.
4. Type the NPK and click on **OK**.	The Protect SA List or the Unprotect SA List for Interface window opens.
5. To create a new SA, click on **Add**.	The IPsec Manual Protect SA or Unprotect SA window opens.
6. Set one or more of the following parameters: • **Cipher Algorithm** • **Cipher Key Length** • **Cipher Key (8 Byte Hex)** • **Integrity Algorithm** • **Integrity Key (16 Byte Hex)** Click on **Help** or see the parameter descriptions beginning on page A-5.	
7. Click on **Apply** and then click on **Done**.	
8. Click on **Done**.	You return to the Circuit Definition window.
9. Choose **File > Exit**.	You return to the Configuration Manager window.

WAN Interface with Frame Relay

To change or add manual SAs on a router interface configured with frame relay, complete the following tasks:

Site Manager Procedure	
You do this	**System responds**
1. In the Configuration Manager window, click on the WAN connector on which you want to add or change manual SAs.	The Edit Connector dialog box opens.
2. Click on **Edit Circuit**.	The Frame Relay Circuit Definition window opens.
3. Click on **Services**.	The Frame Relay Service List window opens.
4. Select a service record from the list.	
5. From the **Protocols** menu, choose **Edit IP > IP Security > Manual Protect SAs** or **Manual Unprotect SAs**.	You may be prompted for the node protection key. If not, go to step 7.
6. Type the NPK and click on **OK**.	The Protect SA List or the Unprotect SA List for Interface window opens.
7. To create a new SA, click on **Add**.	The IPsec Manual Protect SA or Unprotect SA window opens.
8. Set one or more of the following parameters: • **Cipher Algorithm** • **Cipher Key Length** • **Cipher Key (8 Byte Hex)** • **Integrity Algorithm** • **Integrity Key (16 Byte Hex)** Click on **Help** or see the parameter descriptions beginning on page A-5.	
9. Click on **Apply** and then click on **Done**.	
10. Click on **Done**.	You return to the Frame Relay Service List window.
11. Click on **Done**.	You return to the Frame Relay Circuit Definition window.
12. Click on **Done**.	You return to the Configuration Manager window.

Disabling IPsec

To disable IPsec on all router interfaces configured for it, complete the following tasks:

Site Manager Path	
You do this	**System responds**
1. In the Configuration Manager window, choose **Protocols**.	The Protocols menu opens.
2. Choose **IP**.	The IP menu opens.
3. Choose **IP Security**.	The IP Security menu opens.
4. Choose **Globals**.	The Edit IP Security Global Parameters window opens.
5. Set the **IP Security Enable** parameter to **Disable**. Click on **Help** or see the parameter description on page A-3.	
6. Click on **Done**.	You return to the Configuration Manager window.

Note: Disabling IPsec on a router or on an individual interface also disables IKE on that router or interface automatically.

To disable IPsec on an individual interface, complete the following tasks:

Site Manager Path	
You do this	**System responds**
1. In the Configuration Manager window, click on an existing IPsec interface.	The Edit Connector window opens.
2. Click on **Edit Circuit**.	The Circuit Definition window opens.
3. From the **Protocols** menu, choose **Edit IP > IP Security > Enable IPsec**.	The Enable IP Security dialog box opens.
4. Set the **IP Security Enable** parameter to **Disable**. Click on **Help** or see the parameter description on page A-3.	

(continued)

Site Manager Path *(continued)*	
You do this	**System responds**
5. Click on **Done**.	You return to the Circuit Definition window.
6. Choose **File > Exit**.	You return to the Configuration Manager window.

Appendix A
Site Manager Parameters

This appendix contains the Site Manager parameter descriptions for IPsec and IKE services. You can display the same information using Site Manager online Help.

This appendix contains the following information:

Topic	Page
Node Protection Key Parameter	A-2
IPsec Parameters	A-3
IPsec Policy Parameters	A-4
Manual Security Association Parameters	A-5
Automated Security Association (IKE) Parameters	A-10

For each parameter, this appendix provides the following information:

- Parameter name
- Configuration Manager menu path
- Default setting
- Valid parameter options
- Parameter function
- Instructions for setting the parameter
- Management information base (MIB) object ID

The Technician Interface allows you to modify parameters by issuing **set** and **commit** commands with the MIB object ID. This process is equivalent to modifying parameters using Site Manager. For more information about using the Technician Interface to access the MIB, see *Using Technician Interface Software*.

Caution: The Technician Interface does not verify the validity of your parameter values. Entering an invalid value can corrupt your configuration.

Node Protection Key Parameter

Parameter:	**Node Protection Key (8 Byte Hex)**
Path:	Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs) Configuration Manager > Protocols > IP > IKE
Default:	None
Options:	An 8-byte value
Function:	Used as a cryptographic key for protecting sensitive MIB objects. The NPK value is stored in NVRAM. The IPsec software performs a hash of the NPK value, which it places in a special MIB attribute. The NPK value stored in NVRAM is unique to the router. It is used to encrypt the cipher and integrity keys before they are stored in the router MIB.
Instructions:	Enter a 16-digit hexadecimal value. (Enter the prefix 0x before the digits.)
MIB Object ID:	None

IPsec Parameters

Parameter: IP Security Enable

Path: Configuration Manager > Protocols > IP > IP Security > Globals (global setting)
Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Enable IPsec (individual IPsec interface setting)

Default: Enable

Options: Enable | Disable

Function: Enables or disables IPsec on a router. If this parameter is set to Disable, you cannot implement IPsec.

Instructions: To implement IP security on a router, set this parameter to Enable.

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.1.2 (global)
1.3.6.1.4.1.18.3.5.3.2.1.24.1.59 (individual IPsec interface)

Parameter: Maximum SPI

Path: Configuration Manager > Protocols > IP > IP Security > Globals

Default: 384

Options: 256 to 65535

Function: Specifies the maximum acceptable SPI value for manually configured SAs.

Instructions: Enter an integer that represents the maximum SPI value required for manual SAs for this interface.

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.1.5

IPsec Policy Parameters

Parameter: Policy Enable

Path: Configuration Manager > Protocols > IP > IP Security > Outbound Policies
Configuration Manager > Protocols > IP > IP Security > Inbound Policies
Default: Enabled
Options: Enabled | Disabled
Function: Determines whether the named policy will be used on the IP interface.
Instructions: Set this parameter to Enabled to activate the named policy on the IP interface.
MIB Object ID: None

Parameter: Policy Name

Path: Configuration Manager > Protocols > IP > IP Security > Outbound Policies
Configuration Manager > Protocols > IP > IP Security > Inbound Policies
Default: None
Options: Any valid name
Function: Specifies the name of the policy or policy template to be created.
Instructions: Enter a name to identify the policy or policy template that you are creating.
MIB Object ID: None

Manual Security Association Parameters

Parameter: SA Source IP Address

Path: Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: None

Options: Any valid IP address

Function: Specifies the IP address of the source interface for this SA.

Instructions: For a Protect SA, enter the IP address of the local IPsec interface. For an Unprotect SA, enter the IP address of the remote IPsec interface.

MIB Object ID: None

Parameter: SA Destination IP Address

Path: Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: None

Options: Any valid IP address

Function: Specifies the IP address of the destination interface for this SA.

Instructions: For a Protect SA, enter the IP address of the remote IPsec interface. For an Unprotect SA, enter the IP address of the local IPsec interface.

MIB Object ID: None

Parameter: Security Parameter Index

Path: Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: 256

Options: 256 to 65535

Function: The SPI is an arbitrary 32-bit value that, when combined with the destination IP address and the numeric value of the security protocol being used (ESP), identifies the SA for the data packet.

Instructions: Enter a value from 256 to the value configured for the Maximum SPI parameter.

MIB Object ID: None

Parameter: Cipher Algorithm

Path: Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs)

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: DES CBC

Options: None | DES CBC

Function: Identifies the cipher algorithm for this SA.

Instructions: To implement the cipher (or confidential/encrypted) level of security, select the DES algorithm. If you select None, this level of security is not applied to data packets processed according to this SA; that is, the data packets will not be encrypted.

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.5.1.6

Parameter: Cipher Key Length

Path: Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs)

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: DES56

Options: DES40 | DES56

Function: Identifies the cipher key length (strength) for this SA.

Instructions: Select a cipher key length of either 40 or 56 bits. The longer key length (strength) provides greater security.

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.5.1.8

Parameter: Cipher Key (8 Byte Hex)

Path: Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs)

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: None

Options: Any valid 8-byte value

Function: Specifies the key for an SA cipher algorithm. This key value must match on both sides of an SA to enable the encryption and decryption of data packets according to the DES algorithm.

Instructions: Enter a 16-digit (8-byte) hexadecimal value. (Enter the prefix **0x** before the 16 digits.)

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.5.1.7

Parameter:	**Integrity Algorithm**
Path:	Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs) Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add** Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add** Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA
Default:	None
Options:	None | HMAC MD5
Function:	Enables implementation of the HMAC MD5 algorithm, which determines whether a data packet was changed between the source and destination.
Instructions:	To implement the security integrity level, select the HMAC MD5 algorithm. If you select None, this level of security is not applied to data packets processed according to this SA; that is, IP security cannot determine whether a data packet was changed between the source and destination.
MIB Object ID:	1.3.6.1.4.1.18.3.5.3.26.5.1.9

Parameter: Integrity Key (16 Byte Hex)

Path: Configuration Manager > Protocols > IP > IP Security > Manual Security Associations (SAs)

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Protect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Manual Unprotect SAs > **Add**

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Add Policy > **OK** > Manual SA

Default: None

Options: Any valid 16-byte value

Function: Specifies the key for an SA integrity algorithm. This key value must match on both sides of an SA to enable the integrity algorithm to determine whether a data packet was changed between the source and destination.

Instructions: To establish the integrity level of IP security, enter a 32-digit hexadecimal value. (Enter the prefix **0x** before the 32 digits.)

MIB Object ID: 1.3.6.1.4.1.18.3.5.3.26.5.1.10

Automated Security Association (IKE) Parameters

Parameter: **SA Name**

Path: Configuration Manager > Protocols > IP > IKE
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE

Default: None

Options: Any text string

Function: Used to identify various IKE SAs as you alter them.

Instructions: Enter a meaningful alphanumeric string to identify the SA.

MIB Object ID: 1.3.6.1.4.1.18.3.5.27.1.1.8

Parameter: **Pre-shared Key Type**

Path: Configuration Manager > Protocols > IP > IKE
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE

Default: ASCII

Options: ASCII | HEX

Function: Determines which type of preshared key is used, activating the appropriate field for you to enter a preshared key.

Instructions: Choose the pre-shared key type. Configure the same preshared key type on the destination router.

MIB Object ID: None

Parameter: **Pre-shared Key (ascii)**

Path: Configuration Manager > Protocols > IP > IKE
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE

Default: None

Options: Any ASCII value

Function: Used as a cryptographic key for creating IKE SAs between routers. IKE is then used to create automated SAs for data packets.

Instructions: Enter an ASCII string. Configure the same preshared key on the destination router.

MIB Object ID: None

Parameter: Pre-shared Key (hex)

Path: Configuration Manager > Protocols > IP > IKE
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE

Default: None

Options: Any hexadecimal value

Function: Used as a cryptographic key for creating IKE SAs between routers. IKE is then used to create automated SAs for data packets.

Instructions: Enter a hexadecimal number. (Enter the prefix **0x** before the digits.) Configure the same preshared key on the destination router.

MIB Object ID: 1.3.6.1.4.1.18.3.5.27.1.1.9

Parameter: Expiry Value Minutes

Path: Configuration Manager > Protocols > IP > IKE
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE

Default: 480

Options: Any integer

Function: Specifies when an SA key will expire.

Instructions: Enter a value that is appropriate for your site.

MIB Object ID: 1.3.6.1.4.1.18.3.5.27.1.1.10

Parameter: SA Destination

Path: Configuration Manager > Add Circuit > WAN Protocols > PPP | Frame Relay > Select Protocols > IKE > IPsec Configuration for Interface > Outbound Policies
Configuration Manager > Edit Circuit > Protocols > Edit IP > IKE > **Add**

Default: None

Options: Any valid IP address

Function: Specifies the IP address of the destination interface for this automated SA.

Instructions: Enter the IP address of the remote IPsec interface that will negotiate automated SAs using the specified preshared key.

MIB Object ID: 1.3.6.1.4.1.18.3.5.27.1.1.3

Parameter: Anti-Replay Window Size

Path: Configuration Manager > Add Circuit > WAN Protocols > PPP | Frame Relay > Select Protocols > IKE > IPsec Configuration for Interface > Outbound Policies > Add Policy

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Edit Proposal

Default: 64 Packets

Options: Disabled | 32 Packets | 64 Packets | 128 Packets

Function: Specifies the number of packets that are used for replay checking. Anti-replay checking examines the sequence number of encrypted packets received and determines whether the packet has been received before.

Instructions: Choose a number of packets to track for anti-replay checking, or choose Disabled to turn this feature off.

MIB Object ID: None

Parameter: PFS (Perfect Forward Secrecy)

Path: Configuration Manager > Add Circuit > WAN Protocols > PPP | Frame Relay > Select Protocols > IKE > IPsec Configuration for Interface > Outbound Policies > Add Policy

Configuration Manager > Edit Circuit > Protocols > Edit IP > IP Security > Outbound Policies > Edit Proposal

Default: Disabled

Options: Enabled | Disabled

Function: Specifies whether perfect forward secrecy is used for this SA.

Instructions: Choose Enabled or Disabled from the list.

MIB Object ID: None

Appendix B
Definitions of k Commands

This appendix contains definitions of the "k" commands that you use to work in the Technician Interface secure shell.

Command	System Response
kexit	Exits the secure shell.
kpassword	Changes the password of the secure shell.
kseed	Initializes the cryptographic random number generator while in the secure shell.
ksession	Initiates a secure shell session.
kset *<subcommand>* [*<flags>*]	Sets parameter values in the secure shell. Example: **kset npk** *<value>* sets the router node protection key. Also sets protected IPsec MIB objects (keys). The **kset** command encrypts the value specified using the NPK, and writes the encrypted value to the MIB. Example: **kset ipsec wfIpsecEspSaEntry.wfIpsecEspSaManualCipherKey.100.1.1.1.100.1.1.2.256 0x1234567890abcdef**
ktranslate *<old_NPK>*	Translates a configuration from an old node protection key (NPK) value to the current NPK value. Example: **ktranslate** *<old_NPK>*

Appendix C
Configuration Examples

This appendix provides configuration examples for both automated and manual security associations. Configuration of outbound and inbound policies is similar for both automated and manual SAs. Review the section "Manual Protect and Unprotect SA Configuration" on page C-10 only if you are configuring manual security associations.

Inbound and Outbound Policies

All unicast traffic must be defined by a security policy. Traffic traveling from a security gateway is defined by an outbound policy; traffic traveling to a security gateway is defined by an inbound policy. Inbound protected traffic that is associated with an Unprotect SA configured on the interface does not require a policy.

If you are using IKE to establish security associations, see the next section, Automated SA (IKE) Policy Examples." If you are manually configuring security associations, see "Manual SA Policy Examples" on page C-5.

Automated SA (IKE) Policy Examples

As you review the security policy examples in this section, refer to Figure C-1.

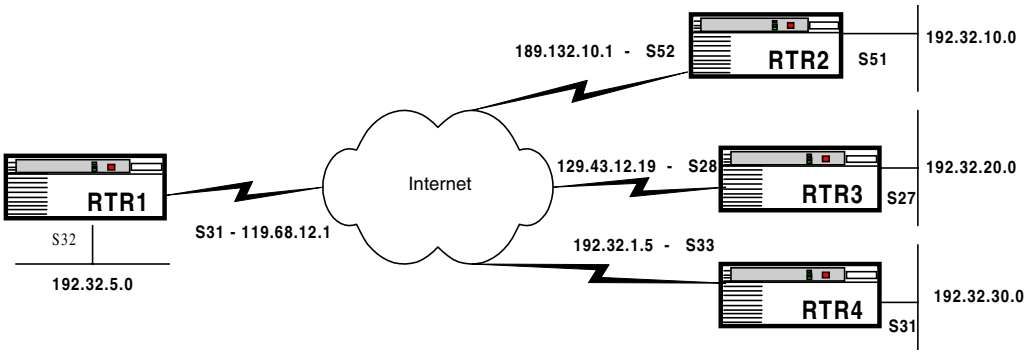

Figure C-1. IPsec Automated Outbound Policies

The following outbound policies are configured for the four routers shown in Figure C-1:

- The SA pair between RTR1 and RTR2 uses both 3DES and HMAC MD5, and the default SA expiry time of 8 hours.
- The SA pair between RTR1 and RTR3 uses only DES and the default SA expiry time of 8 hours.
- The SA pair between RTR1 and RTR4 uses only SHA1 and an SA expiry time of 24 hours.

Example 1: Required Policies, Proposals, and SA Destinations on RTR1 and RTR2 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR2 Subnet 192.32.10.0

RTR 1	**Interface S31**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.5.0 - 192.32.5.255
	IP destination address range:	192.32.10.0 - 192.32.10.255
SA Destination	189.132.10.1	
Preshared Key	0xabba1234daba1234	
Proposal	3DES-MD5	

RTR 2	**Interface S52**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.10.0 - 192.32.10.255
	IP destination address range:	192.32.5.0 - 192.32.5.255
SA Destination	119.68.12.1	
Preshared Key	0xabba1234daba1234	
Proposal	3DES-MD5	

Example 2: Required Policies, Proposals, and SA Destinations on RTR1 and RTR3 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR3 subnet 192.32.20.0

RTR 1	**Interface S31**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.5.0 - 192.32.5.255
	IP destination address range:	192.32.20.0 - 192.32.20.255
SA Destination	129.43.12.19	
Preshared Key	0xbeef1234daba1234	
Proposal	DES	

RTR 3	**Interface S28**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.20.0 - 192.32.20.255
	IP destination address range:	192.32.5.0 - 192.32.5.255
SA Destination	119.68.12.1	
Preshared Key	0xbeef1234daba1234	
Proposal	DES	

Example 3: Required Policies, Proposals, and SA Destinations on RTR1 and RTR4 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR4 Subnet 192.32.30.0

RTR 1	**Interface S31**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.5.0 - 192.32.5.255
	IP destination address range:	192.32.30.0 - 192.32.30.255
SA Destination	192.32.1.5	
Preshared Key	0xabba1579daba1234	
Proposal	SHA1, expiry minutes 1440	

RTR 4	**Interface S33**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.30.0 - 192.32.30.255
	IP destination address range:	192.32.5.0 - 192.32.5.255
SA Destination	119.68.12.1	
Preshared Key	0xabba1579daba1234	
Proposal	SHA1, expiry minutes 1440	

Manual SA Policy Examples

As you review the security policy examples in this section, refer to Figure C-2.

Two routers (RTR1 and RTR2) have OSPF interfaces configured for type NBMA transmit unicast frames. An outbound and an inbound bypass policy protect all unicast traffic for the specified router subnetworks.

Security policy examples 1 and 2 show how to configure outbound policies to protect all unicast traffic between RTR1 and RTR2; examples 3 and 4 show how to configure outbound policies to protect all unicast traffic between RTR2 and RTR3; and examples 5, 6, and 7 show how to configure outbound policies to protect all traffic between RTR1 and RTR3. A bypass inbound policy is in effect for all incoming traffic to the routers so that no SAs are required.

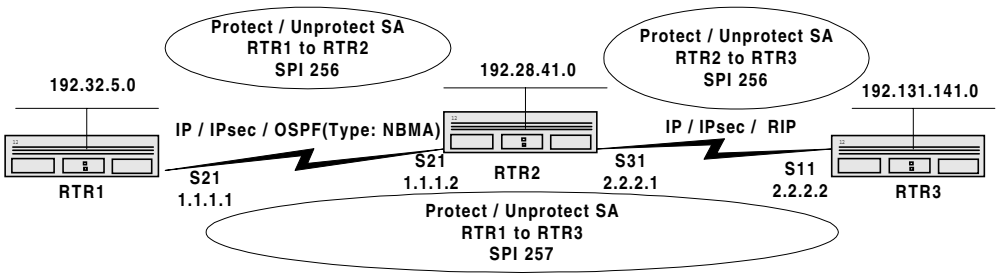

Figure C-2. IPsec Manual Outbound Policies

Example 1: Required Policies on RTR1 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR2 Subnet 192.28.41.0

RTR 1	**Interface S21**
Policy	Outbound
Action	Protect
Criteria	IP source address range: 192.32.5.0 - 192.32.5.255
	IP destination address range: 192.28.41.0 - 192.28.41.255
SA	Source: 1.1.1.1 Destination: 1.1.1.2 SPI 256

RTR1 Interface S21		
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 89 (OSPFIGP)	Protocol 89 (OSPFIGP)

Example 2: Required Policies on RTR2 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR2 Subnet 192.28.41.0

RTR 2	**Interface S21**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.28.41.0 - 192.28.41.255
	IP destination address range:	192.32.5.0 - 192.32.5.255
SA	Source: 1.1.1.2 Destination: 1.1.1.1 SPI 256	

RTR2 Interface S21		
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 89 (OSPFIGP)	Protocol 89 (OSPFIGP)

Example 3: Required Policies on RTR2 to Protect Data Between RTR2 Subnet 192.28.41.0 and RTR3 Subnet 192.131.141.0

RTR 2	**Interface S31**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.28.41.0 - 192.28.41.255
	IP destination address range:	192.131.141.0 - 192.131.141.255
SA	Source: 2.2.2.1 Destination: 2.2.2.2 SPI 256	

Example 4: Required Outbound Policies on RTR3 to Protect Data Between RTR2 Subnet 192.28.41.0 and RTR3 Subnet 192.131.141.0

RTR 3	**Interface S11**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.131.141.0 - 192.131.141.255
	IP destination address range:	192.28.41.0 - 192.28.41.255
SA	Source: 2.2.2.2 Destination: 2.2.2.1 SPI 256	

Example 5: Required Outbound Policies on RTR1 to Protect Data Between RTR1 Subnet 192.32.5.0 and RTR3 Subnet 192.131.141.0

RTR 1	**Interface S21**	
Policy	Outbound	
Action	Protect	
Criteria	IP source address range:	192.32.5.0 - 192.32.5.255
	IP destination address range:	192.131.141.0 - 192.131.141.255
SA	Source: 1.1.1.1 Destination: 2.2.2.2 SPI 257	

RTR1 Interface S21		
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 89 (OSPFIGP)	Protocol 89 (OSPFIGP)

Example 6: Required Policies on RTR2 to Allow ESP Traffic to Pass Through and OSPF to Exchange Routing Updates Between RTR1 and RTR3

RTR2 Interface S21		
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 89 (OSPFIGP)	Protocol 89 (OSPFIGP)
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 50 (ESP)	Protocol 50 (ESP)

RTR2 Interface S31		
Security Policy	Outbound	Inbound
Action	Bypass	Bypass
Criteria	Protocol 50 (ESP)	Protocol 50 (ESP)

Example 7: Required Policies on RTR3 to Protect Data Between RTR3 Subnet 192.131.141.0 and RTR1 192.32.5.0

RTR 3	**Interface S11**
Policy	Outbound
Action	Protect
Criteria	IP source address range: 192.131.141.0 - 192.131.141.255
	IP destination address range: 192.32.5.0 - 192.32.5.255
SA	Source: 2.2.2.2 Destination: 1.1.1.1 SPI 257

Manual Protect and Unprotect SA Configuration

SAs specify which IPsec services are applied to the data packets traveling between the security gateways. An individual SA protects data traveling in one direction. A Protect SA applies IPsec services to outbound traffic; an Unprotect SA decrypts and/or authenticates incoming data packets.

The examples in this section show how to manually configure both Protect and Unprotect SAs. IKE provides automated SA configuration without requiring user configuration.

For SA examples 1 and 2, refer to Figure C-3; for SA example 3, refer to Figure C-4.

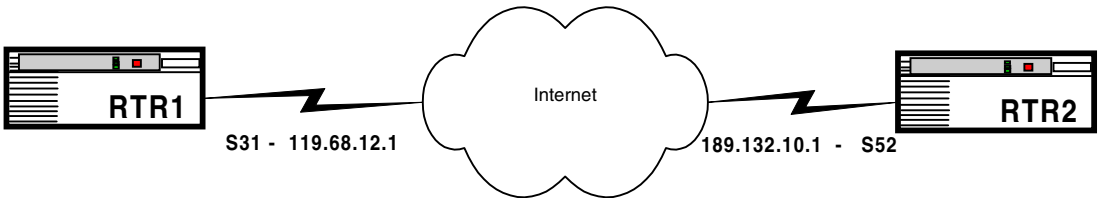

Figure C-3. Single Protect/Unprotect SA Pair

SA Example 1: Configuring a Single Protect/Unprotect SA Pair

In this example, a single Protect/Unprotect SA pair is configured using DES encryption. Both ends of the SA pair use the same cipher algorithm, cipher key, and integrity key (see Figure C-3).

	RTR1 Protect SA	RTR2 Unprotect SA
IP source address	119.68.12.1	119.68.12.1
IP destination address	189.132.10.1	189.132.10.1
Security parameter index (SPI)	256	256
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x0101230405060708 0a0b0c0d0e0f111	0x0101230405060708 0a0b0c0d0e0f111

	RTR1 Unprotect SA	RTR2 Protect SA
IP source address	189.132.10.1	189.132.10.1
IP destination address	119.68.12.1	119.68.12.1
Security parameter index (SPI)	256	256
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x0101230405060708 0a0b0c0d0e0f111	0x0101230405060708 0a0b0c0d0e0f111

SA Example 2: Configuring Two Protect/Unprotect SA Pairs

In this example, two Protect/Unprotect SA pairs are configured using DES encryption. Both ends of the SA pair use the same cipher algorithm and key. The integrity algorithm is set to None (refer to Figure C-3).

	RTR1 Protect SA	RTR2 Unprotect SA
IP source address	119.68.12.1	119.68.12.1
IP destination address	189.132.10.1	189.132.10.1
Security parameter index (SPI)	256	256
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	None	None
Integrity key	None	None

	RTR1 Unprotect SA	RTR2 Protect SA
IP source address	189.132.10.1	189.132.10.1
IP destination address	119.68.12.1	119.68.12.1
Security parameter index (SPI)	257	257
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	None	None
Integrity key	None	None

SA Example 3: Configuring Multiple Protect/Unprotect SA Pairs

In this example, multiple Protect/Unprotect SA pairs are configured between RTR1 and RTR2, RTR3, and RTR4.

- The SA pair between RTR1 and RTR2 uses DES56 and HMAC MD5.
- The SA pair between RTR1 and RTR3 uses only DES56.
- The SA pair between RTR1 and RTR4 uses only HMAC MD5.

As you review the examples, refer to Figure C-4.

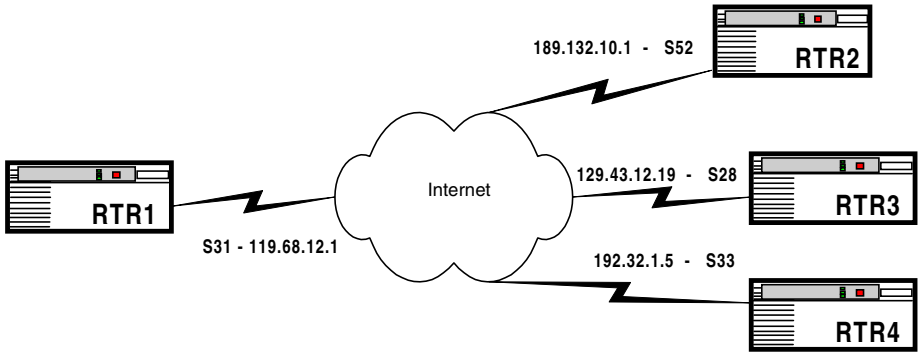

Figure C-4. Multiple Protect/Unprotect SA Pairs

The following two tables show the settings for the Protect/Unprotect SA pairs between RTR1 and RTR2 (refer to Figure C-4).

	RTR1 Protect SA	RTR2 Unprotect SA
IP source address	119.68.12.1	119.68.12.1
IP destination address	189.132.10.1	189.132.10.1
Security parameter index (SPI)	257	257
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x0101230405060708 0a0b0c0d0e0f111	0x0101230405060708 0a0b0c0d0e0f111

	RTR1 Unprotect SA	RTR2 Protect SA
IP source address	189.132.10.1	189.132.10.1
IP destination address	119.68.12.1	119.68.12.1
Security parameter index (SPI)	256	256
Cipher key length	DES56	DES56
Cipher key	0x0101230405060708	0x0101230405060708
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x0101230405060708 0a0b0c0d0e0f111	0x0101230405060708 0a0b0c0d0e0f111

The next two tables show the settings for the Protect/Unprotect SA pairs between RTR1 and RTR3 (refer to Figure C-4).

	RTR1 Protect SA	RTR3 Unprotect SA
IP source address	119.68.12.1	119.68.12.1
IP destination address	129.43.12.19	129.43.12.19
Security parameter index (SPI)	256	256
Cipher key length	DES56	DES56
Cipher key	0xFADE050403020100	0xFADE050403020100
Integrity algorithm	None	None
Integrity key	None	None

	RTR1 Unprotect SA	RTR3 Protect SA
IP source address	129.43.12.19	129.43.12.19
IP destination address	119.68.12.1	119.68.12.1
Security parameter index (SPI)	257	257
Cipher key length	DES56	DES56
Cipher key	0xFADE050403020100	0xFADE050403020100
Integrity algorithm	None	None
Integrity key	None	None

The final two tables show the settings for the Protect/Unprotect SA pairs between RTR1 and RTR4 (refer to Figure C-4).

	RTR1 Protect SA	RTR4 Unprotect SA
IP source address	119.68.12.1	119.68.12.1
IP destination address	192.32.1.5	192.32.1.5
Security parameter index (SPI)	256	256
Cipher key length	None	None
Cipher key	None	None
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x090a0bbb0c0d0e0f11011 020304050607082	0x090a0bbb0c0d0e0f11011 020304050607082

	RTR1 Unprotect SA	RTR4 Protect SA
IP source address	119.32.1.5	119.32.1.5
IP destination address	192.68.12.1	192.68.12.1
Security parameter index (SPI)	258	258
Cipher key length	None	None
Cipher key	None	None
Integrity algorithm	HMAC MD5	HMAC MD5
Integrity key	0x090a0bbb0c0d0e0f11011 020304050607082	0x090a0bbb0c0d0e0f11011 020304050607082

Appendix D
Contivity VPN Switch Interoperability

The BayRS implementation of IPsec can interoperate with the IPsec implementation on the Nortel Networks Contivity VPN Switch. This appendix provides the following information about how to configure the BayRS router and the Contivity VPN Switch for IPsec interoperability.

Topic	Page
Supported Software Versions	D-1
Web Browser Configuration of the Contivity VPN Switch	D-2
IPsec Terminology	D-2
Configuration Considerations	D-3
Feature Comparison Summary	D-4
Troubleshooting BayRS-Contivity IPsec Interoperability	D-6

Refer to the Contivity VPN Switch documentation for more information.

Supported Software Versions

BayRS IPsec software can interoperate with Contivity Version 2.5 software and later. BayRS versions earlier than Version 14.00 do not support IPsec interoperability with the Contivity VPN Switch.

Web Browser Configuration of the Contivity VPN Switch

Unlike products that use BayRS software, you configure Contivity products through a Web browser. If you are new to Contivity configuration, note the following general guidelines when you configure Contivity software using the browser:

- You must click on OK at the bottom of Contivity configuration screens to continue as you configure the Contivity software. If you use your browser navigation buttons, your configuration choices will be lost.
- All configuration changes are dynamic, either taking place immediately or taking effect for subsequent IKE/IPsec connections made to the peer.

IPsec Terminology

Contivity software uses different terminology than BayRS for some IPsec features. Table D-1 lists some of these terms.

Table D-1. Comparison of BayRS and Contivity IPsec Terminology

BayRS Term	Contivity Equivalent
Security association (SA) formed by two IKE security gateways or peers	IPsec branch office connection
IPsec SAs	IPsec branch office sessions
Policy	Branch office connection's remote and local accessible networks
Policy proposal	Branch office connection's group IPsec encryption and rekey information

In general, when you refer to security associations (SAs), especially if you are troubleshooting a new configuration, it is helpful to specify the type of SA that you are referring to: an IKE SA or an IPsec SA.

In addition, the BayRS implementation of IPsec uses the term *protocol* in protocol filtering criteria for an IPsec policy template or policy. This term is not comparable to the Contivity filters' protocol options. BayRS IPsec uses *protocol* as the value for *protocol selector* as defined in IETF RFCs for IPsec. The Contivity VPN Switch does not support the *protocol selector* defined in the RFCs.

Configuration Considerations

When you configure a Contivity switch to interoperate with BayRS IPsec, you must configure the Contivity switch to include a branch office connection with a tunnel type equal to "IPsec." For detailed instructions on configuring branch office connections, see *Configuring the Contivity VPN Switch*.

The following sections provide information to help you configure IPsec to interoperate on BayRS and Contivity platforms.

Network Addresses

When you configure IP network addresses, note that BayRS lets you configure a network range that can include any number of valid IP addresses. The ability to configure address ranges provides flexibility for BayRS-to-BayRS IPsec implementations.

However, many IPsec platforms, including the Contivity VPN Switch, require you to configure IP addresses by subnet and mask. Therefore, to interoperate with the Contivity implementation of IPsec, a BayRS policy must contain source and destination IP address ranges that match the exact ranges of the corresponding Contivity branch office connection's local and remote accessible networks.

For example, if the Contivity side of the IPsec tunnel branch office connection has a remote network of 192.32.54.128/255.255.255.224 and a local network of 192.32.13.128/255.255.255.224, the corresponding BayRS policy must have a source address range of exactly 192.32.54.128 to 192.32.54.159, and a destination address range of exactly 192.32.13.128 to 192.32.13.159.

Routing

Only static routing is supported between the Contivity switch and BayRS IPsec gateways. Although the Contivity switch offers VPN Routing, which sends RIP routes through an IPsec tunnel, this feature is proprietary to the Contivity switch.

A BayRS router interface configured with IPsec sends broadcasts out the interface in clear text only. The Contivity switch's public interface does not accept these clear text broadcasts.

Performance

The BayRS implementation of IPsec is slower than the Contivity implementation. Consider performance when determining which traffic needs IPsec protection. If perfect forward secrecy (PFS) is unnecessary, disable PFS on the Contivity switch (PFS is disabled by default on BayRS).

Note: To disable PFS on the Contivity switch, go to the Profiles > Groups > IPsec: Configure display.

Using DES encryption instead of triple DES encryption may be preferable when considering a tradeoff between performance and protection. Triple DES computational requirements for encrypting data are higher than those for DES.

Feature Comparison Summary

This section lists the IPsec features supported by both BayRS and Contivity platforms and features supported by the BayRS or Contivity platform only.

Features Supported by Both Platforms

The following features are supported by both the BayRS and Contivity implementations of IPsec:

- IPsec ESP protocol
- IKE preshared keys
- IPsec in tunnel mode
- Perfect forward secrecy
- 3DES key generation by Oakley Group 1
- Vendor ID payload
- Delete Payload for IPsec SAs—sending and receiving
- Delete Payload for IKE SAs—receiving only (Contivity software also supports sending)
- Static routes

BayRS Features Not Supported by the Contivity VPN Switch

Contivity does not support the following BayRS features:

- Frame relay interface configured as an IPsec gateway
- Manual IPsec SAs
- Source and destination address ranges that contain a partial range of a network as opposed to network-only addressing for configuration of accessible network IP addresses
- Protocol selectors as defined in RFC 2401, “Security Architecture for the Internet Protocol,” for use as a criterion to allow establishment of an SA
- PFS support on a per-IPsec tunnel basis (Contivity uses PFS for all or none of the sessions [IPsec SAs] over a branch office connection.)
- DES-only and 3DES-only encryption options (without integrity transforms)
- Routing/broadcast traffic in clear text

Contivity VPN Switch Features Not Supported by BayRS

BayRS does not support the following Contivity features:

- Certificates/public key infrastructure
- Delete payload for IKE SA sent when terminating IKE SAs
- IPsec transport mode
- AH IPsec protocol
- Vendor ID disable/enable (vendor ID is always enabled and not configurable on BayRS)
- Routing information protocol inside an IPsec tunnel (proprietary)

Troubleshooting BayRS-Contivity IPsec Interoperability

Use the following troubleshooting tools to diagnose and resolve interoperability problems between the BayRS and Contivity implementations of IPsec.

BayRS Tools

BayRS provides the following troubleshooting tools that may help with interoperability issues:

- Event log—Look for IPsec, IKE, IPsec_Audit, and KEYMGR events.
- Technician Interface show scripts—Use Technician Interface show scripts to display information and statistics about IPsec and IKE policies and SAs. For example, **show ipsec selector out** displays how many packets matched each policy.
- Technician Interface—Enable IPsec debugging using the Technician Interface command **ipsec**. Enter **help ipsec** for command usage.
- Packet capture—Run packet capture on the interface on which IPsec is configured (or on other interfaces where traffic originates or exits). Although encrypted packets are still encrypted when viewed through packet capture, you can distinguish IKE packets from IPsec packets and get an idea of how far an SA negotiation gets in the process of establishing IKE and IPsec SAs.

Contivity Tools

Contivity software provides the following troubleshooting tools that may help with interoperability issues:

- The Admin > Status > Event Log display provides a detailed record of all events that take place on the system.
- The Test button on the Profiles > Branch Office display allows you to verify that the branch office connection is properly configured and that the remote gateway remains reachable. Detailed messages are sent to the event log.
- The Admin > Status > Sessions display provides details of the sessions (IPsec tunnels) for each active branch office connection. These details include the time that each session is expected to expire.
- The Admin > Status > Statistics display provides system-level statistics that can help resolve lower-level problems with connections.

Symptoms You May See

If traffic does not appear to traverse the IPsec tunnel, first check for configuration mismatches such as the following:

- PFS is enabled on Contivity but not enabled on BayRS for every policy with a proposal that has the Contivity switch as the destination gateway.

  Sample Contivity event log message:

  ```
  09/02/1999 23:15:53 0 ISAKMP [03] PFS required but not provided
  by 144.1.1.152
  ```

- Encryption or network addressing does not have matching values with the remote IPsec gateway configuration.

  Sample BayRS event log message:

  ```
  # 23: 09/02/1999 22:33:27.832 INFO SLOT 1 IKE Code: 130
  No Proposal Chosen: Source 10.1.0.1, Dest 144.1.1.152
  Message ID 0x0, SPI length: 4, SPI: 1165167
  ```

  Sample Contivity event log message:

  ```
  09/02/1999 22:28:38 0 ISAKMP [13] Error notification (No
  proposal chosen) received from 144.1.1.152
  09/02/1999 22:28:38 0 Security [12] Session: IPSEC[-]:2083
  logged out
  ```

- BayRS source and destination address ranges do not match the Contivity branch office remote and local network address ranges derived from the network and mask specified. If you see the following events repeated in the Contivity event log, this condition may be present:

  ```
  09/02/1999 22:49:53 0 ISAKMP [13] Invalid key information in
  message from 142.1.1.152
  09/02/1999 22:49:53 0 ISAKMP [03] Deleting IPsec SAs with
  140.1.1.152:
  ```

- BayRS response time is sluggish when you use Site Manager or the Technician Interface to manage the router.

  This problem may be the result of misconfiguration, where PFS is enabled and IPsec continuously and unsuccessfully attempts to establish an IPsec SA.

  This problem may also indicate that the traffic load for the router and encryption algorithm may be more than the router can process. If triple DES is in use, change it to DES where possible.

- IPsec SAs are deleted on the local side. This message is probably due to normal operation after IPsec SAs expire. However, if the message is repeated many times during an interval shorter than the expiry time set for IPsec SAs, there could be an SA negotiation problem, possibly caused by mismatched configurations.

  Sample BayRS error message:

  ```
  # 969: 09/02/1999 16:32:43.441 INFO SLOT 5 IKE Code: 153
  Delete payload received from peer 144.1.1.133, message ID
  0x84dc7aef,
  SPI length: 4, Num. of SPIs: 1, Protocol:3, 1st SPI: 1248199851
  ```

- An Informational Exchange Trace message may occasionally appear during normal operation. If you see it continuously, it could indicate an SA negotiation problem, also probably due to mismatched configurations.

  Sample BayRS error message:

  ```
  # 15: 09/02/1999 21:49:07.606 TRACE SLOT 1 IKE Code: 31
  Informational Exchange received on unknown SA
  ```

Appendix E
Protocol Numbers

IPsec policies may include a protocol criterion that references the 1-byte protocol number field in an IP packet header. To assist you in creating policies, this appendix lists the values that apply to each protocol.

To obtain the most recent list of the numeric values assigned to various protocols, see the Internet Assigned Numbers Authority (IANA) Web site at:

http://www.iana.org

The direct path to the list of legal values that you can specify for an IPsec policy protocol criterion is:

http://www.iana.org/assignments/protocol-numbers

Assigned Internet Protocol Numbers by Name

Table E-1 lists the Internet Protocol numbers alphabetically by their acronyms.

Table E-1. Internet Protocol Numbers Sorted by Acronym

Number	Protocol Acronym	Protocol Name Expanded
61		Any host internal protocol
63		Any local network
68		Any distributed file system
99		Any private encryption scheme
114		Any 0-hop protocol
34	3PC	Third Party Connect Protocol
107	A/N	Active Networks
51	AH	Authentication Header for IPv6
13	ARGUS	N/A
104	ARIS	N/A
93	AX.25	AX.25 Frames
10	BBN-RCC-MON	BBN RCC Monitoring
49	BNA	N/A
76	BR-SAT-MON	Backroom SATNET Monitoring
7	CBT	N/A
62	CFTP	N/A
16	CHAOS	Chaos
110	Compaq-Peer	Compaq Peer Protocol
73	CPHB	Computer Protocol Heart Beat
72	CPNX	Computer Protocol Network Executive
126	CRTP	Combat Radio Transport Protocol
127	CRUDP	Combat Radio User Datagram Protocol
19	DCN-MEAS	DCN Measurement Subsystems
37	DDP	Datagram Delivery Protocol
116	DDX	D-II Data Exchange
86	DGP	Dissimilar Gateway Protocol

(continued)

Table E-1. Internet Protocol Numbers Sorted by Acronym *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
8	EGP	Exterior Gateway Protocol
88	EIGRP	N/A
14	EMCON	N/A
98	ENCAP	Encapsulation Header
50	ESP	Encapsulating Security Payload for IPv6
97	ETHERIP	Ethernet-within-IP Encapsulation
133	FC	Fibre Channel
125	FIRE	N/A
3	GGP	Gateway-to-Gateway Protocol
100	GMTP	N/A
47	GRE	General Routing Encapsulation
20	HMP	Host Monitoring Protocol
0	HOPOPT	IPv6 Hop-by-Hop Option
52	I-NLSP	Integrated Net Layer Security Protocol
117	IATP	Interactive Agent Transfer Protocol
1	ICMP	Internet Control Message Protocol
35	IDPR	Inter-Domain Policy Routing Protocol
38	IDPR-CMTP	IDPR Control Message Transport Protocol
45	IDRP	Inter-Domain Routing Protocol
101	IFMP	Ipsilon Flow Management Protocol
2	IGMP	Internet Group Management Protocol
9	IGP	Any private interior gateway
40	IL	IL Transport Protocol
4	IP	IP-in-IP (encapsulation)
108	IPComp	IP Payload Compression Protocol
71	IPCV	Internet Packet Core Utility
94	IPIP	IP-within-IP Encapsulation Protocol
129	IPLT	N/A
67	IPPC	Internet Pluribus Packet Core

(continued)

Table E-1. Internet Protocol Numbers Sorted by Acronym *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
41	IPv6	Internet Protocol version 6
44	IPv6-Frag	Fragment Header for IPv6
58	IPv6-ICMP	ICMP for IPv6
59	IPv6-NoNxt	No Next Header for IPv6
60	IPv6-Opts	Destination Options for IPv6
43	IPv6-Route	Routing Header for IPv6
111	IPX-in-IP	IPX in IP
28	IRTP	Internet Reliable Transaction Protocol
124	ISIS	ISIS over IPv4
80	ISO-IP	ISO Internet Protocol
29	ISO-TP4	ISO Transport Protocol Class 4
65	KRYPTOLAN	Kryptolan
115	L2TP	Layer Two Tunneling Protocol
91	LARP	Locus Address Resolution Protocol
25	LEAF-1	Leaf-1
26	LEAF-2	Leaf-2
32	MERIT-INP	MERIT Internodal Protocol
31	MFE-NSP	MFE Network Services Protocol
48	MHRP	Mobile Host Routing Protocol
95	MICP	Mobile Internetworking Control Protocol
55	MOBILE	IP Mobility
92	MTP	Multicast Transport Protocol
18	MUX	Multiplexing
54	NARP	NBMA Address Resolution Protocol
30	NETBLT	Bulk Data Transfer Protocol
85	NSFNET-IGP	N/A
11	NVP-II	Network Voice Protocol
89	OSPFIGP	N/A
113	PGM	PGM Reliable Transport Protocol

(continued)

Table E-1. Internet Protocol Numbers Sorted by Acronym *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
103	PIM	Protocol Independent Multicast
131	PIPE	Private IP Encapsulation within IP
102	PNNI	PNNI over IP
21	PRM	Packet Radio Measurement
123	PTP	Performance Transparency Protocol
12	PUP	N/A
75	PVP	Packet Video Protocol
106	QNX	N/A
27	RDP	Reliable Data Protocol
46	RSVP	Reservation Protocol
66	RVD	MIT Remote Virtual Disk Protocol
64	SAT-EXPAK	SATNET and Backroom EXPAK
69	SAT-MON	SATNET Monitoring
96	SCC-SP	Semaphore Communications Security Protocol
105	SCPS	N/A
132	SCTP	Stream Control Transmission Protocol
42	SDRP	Source Demand Routing Protocol
82	SECURE-VMTP	N/A
33	SEP	Sequential Exchange Protocol
57	SKIP	N/A
122	SM	N/A
121	SMP	Simple Message Protocol
109	SNP	Sitara Networks Protocol
90	Sprite-RPC	Sprite RPC Protocol
130	SPS	Secure Packet Shield
119	SRP	SpectraLink Radio Protocol
128	SSCOPMCE	N/A
5	ST	Stream
118	ST	Schedule Transfer Protocol

(continued)

Table E-1. Internet Protocol Numbers Sorted by Acronym *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
77	SUN-ND	SUN ND Protocol-Temporary
53	SWIPE	IP with Encryption
87	TCF	N/A
6	TCP	Transmission Control Protocol
56	TLSP	Transport Layer Security Protocol using Kryptonet key management
39	TP++	TP++ Transport Protocol
23	TRUNK-1	Trunk-1
24	TRUNK-2	Trunk-2
84	TTP	N/A
17	UDP	User Datagram Protocol
120	UTI	N/A
83	VINES	N/A
70	VISA	VISA Protocol
81	VMTP	N/A
112	VRRP	Virtual Router Redundancy Protocol
79	WB-EXPAK	WIDEBAND EXPAK
78	WB-MON	WIDEBAND Monitoring
74	WSN	Wang Span Network
15	XNET	Cross Net Debugger
22	XNS-IDP	XEROX NS IDP
36	XTP	N/A

Assigned Internet Protocol Numbers by Number

Table E-2 lists the Internet Protocol numbers in order by protocol number.

Table E-2. Internet Protocol Numbers Sorted by Number

Number	Protocol Acronym	Protocol Name Expanded
0	HOPOPT	IPv6 Hop-by-Hop Option
1	ICMP	Internet Control Message Protocol
2	IGMP	Internet Group Management Protocol
3	GGP	Gateway-to-Gateway Protocol
4	IP	IP-in-IP (encapsulation)
5	ST	Stream
6	TCP	Transmission Control Protocol
7	CBT	N/A
8	EGP	Exterior Gateway Protocol
9	IGP	Any private interior gateway
10	BBN-RCC-MON	BBN RCC Monitoring
11	NVP-II	Network Voice Protocol
12	PUP	N/A
13	ARGUS	N/A
14	EMCON	N/A
15	XNET	Cross Net Debugger
16	CHAOS	Chaos
17	UDP	User Datagram Protocol
18	MUX	Multiplexing
19	DCN-MEAS	DCN Measurement Subsystems
20	HMP	Host Monitoring Protocol
21	PRM	Packet Radio Measurement
22	XNS-IDP	XEROX NS IDP
23	TRUNK-1	Trunk-1
24	TRUNK-2	Trunk-2
25	LEAF-1	Leaf-1

(continued)

Table E-2. Internet Protocol Numbers Sorted by Number *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
26	LEAF-2	Leaf-2
27	RDP	Reliable Data Protocol
28	IRTP	Internet Reliable Transaction Protocol
29	ISO-TP4	ISO Transport Protocol Class 4
30	NETBLT	Bulk Data Transfer Protocol
31	MFE-NSP	MFE Network Services Protocol
32	MERIT-INP	MERIT Internodal Protocol
33	SEP	Sequential Exchange Protocol
34	3PC	Third Party Connect Protocol
35	IDPR	Inter-Domain Policy Routing Protocol
36	XTP	N/A
37	DDP	Datagram Delivery Protocol
38	IDPR-CMTP	IDPR Control Message Transport Protocol
39	TP++	TP++ Transport Protocol
40	IL	IL Transport Protocol
41	IPv6	Internet Protocol version 6
42	SDRP	Source Demand Routing Protocol
43	IPv6-Route	Routing Header for IPv6
44	IPv6-Frag	Fragment Header for IPv6
45	IDRP	Inter-Domain Routing Protocol
46	RSVP	Reservation Protocol
47	GRE	General Routing Encapsulation
48	MHRP	Mobile Host Routing Protocol
49	BNA	N/A
50	ESP	Encapsulating Security Payload for IPv6
51	AH	Authentication Header for IPv6
52	I-NLSP	Integrated Net Layer Security Protocol
53	SWIPE	IP with Encryption
54	NARP	NBMA Address Resolution Protocol

(continued)

Table E-2. Internet Protocol Numbers Sorted by Number *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
55	MOBILE	IP Mobility
56	TLSP	Transport Layer Security Protocol using Kryptonet key management
57	SKIP	N/A
58	IPv6-ICMP	ICMP for IPv6
59	IPv6-NoNxt	No Next Header for IPv6
60	IPv6-Opts	Destination Options for IPv6
61		Any host internal protocol
62	CFTP	N/A
63		Any local network
64	SAT-EXPAK	SATNET and Backroom EXPAK
65	KRYPTOLAN	Kryptolan
66	RVD	MIT Remote Virtual Disk Protocol
67	IPPC	Internet Pluribus Packet Core
68		Any distributed file system
69	SAT-MON	SATNET Monitoring
70	VISA	VISA Protocol
71	IPCV	Internet Packet Core Utility
72	CPNX	Computer Protocol Network Executive
73	CPHB	Computer Protocol Heart Beat
74	WSN	Wang Span Network
75	PVP	Packet Video Protocol
76	BR-SAT-MON	Backroom SATNET Monitoring
77	SUN-ND	SUN ND Protocol—Temporary
78	WB-MON	WIDEBAND Monitoring
79	WB-EXPAK	WIDEBAND EXPAK
80	ISO-IP	ISO Internet Protocol
81	VMTP	N/A
82	SECURE-VMTP	N/A
83	VINES	N/A

(continued)

Table E-2. Internet Protocol Numbers Sorted by Number *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
84	TTP	N/A
85	NSFNET-IGP	N/A
86	DGP	Dissimilar Gateway Protocol
87	TCF	N/A
88	EIGRP	N/A
89	OSPFIGP	N/A
90	Sprite-RPC	Sprite RPC Protocol
91	LARP	Locus Address Resolution Protocol
92	MTP	Multicast Transport Protocol
93	AX.25	AX.25 Frames
94	IPIP	IP-within-IP Encapsulation Protocol
95	MICP	Mobile Internetworking Control Protocol
96	SCC-SP	Semaphore Communications Security Protocol
97	ETHERIP	Ethernet-within-IP Encapsulation
98	ENCAP	Encapsulation Header
99		Any private encryption scheme
100	GMTP	N/A
101	IFMP	Ipsilon Flow Management Protocol
102	PNNI	PNNI over IP
103	PIM	Protocol Independent Multicast
104	ARIS	N/A
105	SCPS	N/A
106	QNX	N/A
107	A/N	Active Networks
108	IPComp	IP Payload Compression Protocol
109	SNP	Sitara Networks Protocol
110	Compaq-Peer	Compaq Peer Protocol
111	IPX-in-IP	IPX in IP
112	VRRP	Virtual Router Redundancy Protocol

(continued)

Table E-2. Internet Protocol Numbers Sorted by Number *(continued)*

Number	Protocol Acronym	Protocol Name Expanded
113	PGM	PGM Reliable Transport Protocol
114		Any 0-hop protocol
115	L2TP	Layer Two Tunneling Protocol
116	DDX	D-II Data Exchange
117	IATP	Interactive Agent Transfer Protocol
118	ST	Schedule Transfer Protocol
119	SRP	SpectraLink Radio Protocol
120	UTI	N/A
121	SMP	Simple Message Protocol
122	SM	N/A
123	PTP	Performance Transparency Protocol
124	ISIS	ISIS over IPv4
125	FIRE	N/A
126	CRTP	Combat Radio Transport Protocol
127	CRUDP	Combat Radio User Datagram Protocol
128	SSCOPMCE	N/A
129	IPLT	N/A
130	SPS	Secure Packet Shield
131	PIPE	Private IP Encapsulation within IP
132	SCTP	Stream Control Transmission Protocol
133	FC	Fibre Channel
134-254	Unassigned	
255	Reserved	

Index

Numbers

3DES, 1-16

A

Access Node (AN) support, 1-3
Access Stack Node (ASN) support, 1-3
acronyms, xv
Advanced Remote Node (ARN) support, 1-3
anti-replay service description, 1-15
auditing service, 1-5
authentication, 1-4
authentication header (AH), 1-15
authentication service, 1-4

B

Backbone Node (BN) support, 1-3
BayRS, version requirements, 1-3, 2-1
bidirectional traffic, with security associations, 1-12

C

capi.exe file, 2-2
capi.ppc file, 2-2
cipher
  algorithm and key parameters, 1-4
  block chaining (CBC), 1-4, 1-16
  considerations, 3-9
  Site Manager parameters, A-6, A-7
confidentiality service, 1-4
Configuration Manager, enabling IPsec, 3-1
configuration security, 2-4
conventions, text, xiv
customer support, xvii

D

Data Encryption Standard (DES), 1-16
data integrity, description, 1-15
data origin authentication, description, 1-15
dial services support, 1-3
Diffie-Hellman protocol, use in perfect forward secrecy, 1-17
disabling IPsec, 4-11

E

enabling
  IKE, 3-1
  IPsec, 3-1
Encapsulating Security Payload (ESP), 1-15
encryption
  export limitations, 1-16
  generating a seed, 2-6
  limitations, 2-4

F

frame relay support, 1-3

H

Hashing Message Authentication Code (HMAC), 1-16
HMAC MD5, 1-4, 1-16, A-8

I

IKE
- description, 1-11
- enabling, 3-1
- security associations, 3-7

Image Builder, 2-1

inbound security policies, 1-5, 1-9

initialization vectors (IVs), 2-5

installation, 2-2

integrity service
- algorithm, considerations, 3-9
- description, 1-4
- encryption key, 2-4

Internet Assigned Numbers Authority (IANA), 1-11, E-1

Internet Engineering Task Force (IETF), role in IPsec development, 1-2

Internet Key Exchange (IKE)
- description, 1-11, 1-17
- negotiating security associations, 1-13
- using, 3-8

IP destination address, 1-11

IP interface, 1-5

IPsec
- description, 1-2
- disabling, 4-11
- enabling, 3-1
- installing, 2-2
- key constructs, 1-7

ISAKMP/Oakley, 1-11

K

k commands, 2-6, B-1

L

log
- policy criterion, 3-3
- router log NPK confirmation, 2-8

M

management information base (MIB), 2-5, 2-8

Message Digest 5 (MD5), 1-4, 1-16, A-8

N

node protection key (NPK)
- configuration considerations, 2-4
- generating, 2-5
- Site Manager parameter, A-1
- usage, 2-5

O

outbound security policies, 1-5, 1-10

P

Passport 2430 support, 1-3

Passport 5430 support, 1-3

perfect forward secrecy (PFS), 1-17

performance considerations, 1-17

policies. *See* security policy

policy template
- creating inbound, 3-6
- creating outbound, 3-4
- description, 1-9
- usage, 3-2

PPP support, 1-3

pre-shared key, IKE use, 1-17

product support, xvii

protocol policy criterion, 1-11

protocols supported, 1-3

public data network, tunnel mode use, 1-6

publications, hard copy, xvi

R

random number generator (RNG), 2-5

Router Files Manager, 2-1

router log, NPK confirmation, 2-8

routers supported, 1-3

S

security
  configuration, 2-4
  site considerations, 2-4
security association
  automated, 3-7
  creating, 3-7
  description, 1-11
  examples, 1-14
  IKE use, 3-8
  manual, 3-9, 3-10
  manual creation, 3-11
  protect, 1-10, 3-9
  Site Manager parameters, A-5
  unprotect, 3-9
security associations database (SAD), IPsec usage, 1-13
security associations, manual
  sample configurations, C-10
security gateway
  creating, 1-5, 1-8
  encryption strength, 1-16
security parameter index (SPI), 1-11, 1-13
security policy
  action, 1-10, 3-3, C-5
  creating, 3-2
  criteria, 1-9, 1-10, 3-2
  examples, 1-14, C-5
  inbound, 1-5, 1-8, 1-9
  number, 1-8
  outbound, 1-5, 1-8, 1-10, 3-4, 3-6, A-4
  Site Manager parameters, A-4
  unicast traffic, 3-3
security policy database (SPD), 1-9
seed for encryption, generating, 2-6
SHA1, 1-4, 1-16
shared secret, description, 1-11
Site Manager
  enabling IPsec, 3-1
  parameter descriptions, A-1
  version requirements, 1-3, 2-1
site security, 2-4
support, Nortel Networks, xvii
System 5000 support, 1-3

T

technical publications, xvi
technical support, xvii
Technician Interface, 2-5, 2-6
text conventions, xiv
triple DES, 1-16
trusted hosts, description, 1-8
tunnel mode, 1-6

U

unicast
  configuring policies for, 3-3
untrusted hosts, description, 1-8

V

version requirements
  BayRS, 1-3, 2-1
  Site Manager, 1-3, 2-1
virtual private networks (VPNs), with IPsec, 1-2

W

WAN interface security gateway, 1-8
WAN protocols supported, 1-3